Likebook Alita Reboot Instruction

First, warm reminder:

- 1. Before flashing, please properly back up all important files in advance.
- 2. Make sure that the device memory and power are sufficient.
- 3. Flashing will clear all the file contents.

Flashing steps:

Driver installation:

1. <u>https://mega.nz/file/TFYUBQpZ#j562jVKd2w2a9ZXItVav0A7HrNR</u>

mWUVfg28zGkGgGJk

Open the driver folder, double-click DriverInstall.exe, and click Driver Installation.

ADBDriver	2017/6/27 10:49	文件夹	
📙 bin	2017/6/27 10:49	文件夹	
Driver	2017/6/27 10:49	文件夹	
📙 Log	2015/9/8 10:01	文件夹	
🔊 config.ini	2015/8/28 10:34	配置设置	1 KB
lexe DriverInstall.exe	2015/8/28 10:34	应用程序	489 KB
🥁 Readme.txt	2015/8/28 10:34	TXT 文件	1 KB

2. Confirm installation



3. Open the flashing tool folder and double-click AndroidTool.exe to

open it:

https://mega.nz/file/DRhQGSwT#mCcvipndWB8k4Qbyl7BVtviK77si

YBGEV8C158tLXJ4

🍌 (上级目录)			文件夹	
길 bin			文件夹	2
🕌 Language			文件夹	2
🕌 Log			文件夹	2
📙 Output			文件夹	2
AndroidTool.exe	1.1 MB	381.3 KB	应用程序	2
Mandroid开发工具手册_v1.2.pdf	578.8 KB	512.4 KB	PDF 文件	2
config.cfg	7.2 KB	1 KB	CFG 文件	2
🗊 config.ini	1.4 KB	1 KB	配置设置	2
Readme.txt	1 KB	1 KB	文本文档	2

4. Select software:

Click the "Firmware" button and select the software which you need to

flash. Software:

https://mega.nz/file/uY5VxDIK#J0LpzvBfCGkjF6NIDk5w_PkmmAbas_bbHCwIby2HQP4

🔀 RKDevTool v2.58	– 🗆 X
RKDevTool v2.58 Download Image Upgrade Firmware Advanced Function Firmware Upgrade Switch EraseFlash Fw Ver: Loader Ver: Chip Info:	
No Devices Found	

5. Connect the equipment for rebooting:

When the device is closed (press the home button 10s even no any change on the screen), press and hold the "upgrade key" (the hole next to the power key) before inserting the USB cable, then no loose the "upgrade key" holding.



6. After the flash tool reads the device, it will display the "Loader" device. You can loose the "upgrade key" holding now. Then click "Upgrade" to root the device.

KDevTool v2	58	– 🗆 X
Download Image Firmware Fw Ver: Firmware:	Upgrade Firmware Advanced Function Upgrade Switch EraseFlash 6.0.00 Loader Ver: 2.60 Chip Info: RK330A K:\软件备份\T80D-A\Launcher 2.0\User\update=456.img	Test Device Start Test Device Success Check Chip Start Check Chip Success Get FlashInfo Start Get FlashInfo Start Prepare IDB Start Download IDB Start Download IDB Start Download IDB Start Reset Device Start Reset Device Success Wait For Loader Start Wait For Loader Start Test Device Success Download Firmware Start Download Firmware Success Reset Device Success Reset Device Success Reset Device Success
	Found One LOADER Device	

7. When the rooting finished, there will be "Reset Device Success" reminder on the right side of tool. (Please wait the device to restart and no USB cable loose during this time)

KKDevTool v2.58	- 🗆 🗙
Download Image Upgrade Firmware Advanced Function Firmware Upgrade Switch EraseFlash Fw Ver: 6.0.00 Loader Ver: 2.60 Chip Info: RK330A Firmware: K:\软件备份\T80D-A\Launcher 2.0\User\update-456.img Found One LOADER Device	Test Device Start Test Device Success Check Chip Start Check Chip Start Get FlashInfo Start Get FlashInfo Start Prepare IDB Start Download IDB Start Download IDB Start Download IDB Start Reset Device Start Reset Device Start Wait For Loader Start Wait For Loader Start Test Device Start Test Device Start Download Firmware Start Download Firmware Start Reset Device Start