


# Demo Mode Set Up Instructions for all Kobo eReaders

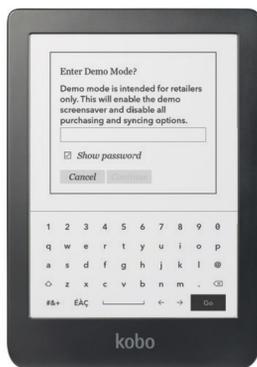


If the device is new, just out of the box:

1. Select language.
2. On the “Welcome to Kobo!” screen, triple tap the top right corner of the screen.
3. Enter password: “demomodeon”.
4. If Wi-Fi is available, connect to your network now to get the latest software. An update will download and install automatically. If Wi-Fi is unavailable, choose “Skip” at the bottom right of the screen.
5. Select Region, if prompted.
6. Device is now in demo mode! The demo loop will begin after the device is inactive for a few minutes.
7. For Kobo Sage and Kobo Elipsa, it is important to complete the following additional steps for the Kobo Stylus and Notebook Experience.



Complete while connected to Wi-Fi:

1. Tap “My Notebooks” in the bottom menu, then tap “New” to create a New Device Notebook, and select “Advanced Notebook”
2. Type any letter to create a Notebook name
3. A prompt will appear asking you to Sync, tap “Sync Now”
4. Connect to Wi-Fi if prompted.
5. Allow Sync to complete. Progress bar will appear.
6. When complete, Notebook will open.
7. Exit the Notebook
8. Demo mode for Kobo Stylus and Notebook is now set up.

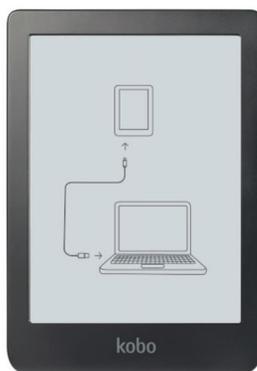

# Demo Mode Set Up Instructions Continued

If the device is already set up in demo mode or as a regular customer device, you will need to first Factory Reset the device:

1. Tap the menu button (3 lines) in the top right of the screen.
2. Select “Settings”.
3. Select “Device Information”.
4. Select “Factory Reset”, “Reset now”.
5. If device is in demo mode, enter password: “demomodeoff”
6. You will see a “Restoring” message on the screen .
7. Once complete, you will be prompted to plug in the device into a computer, or any other powered USB.
8. Proceed to step one of the “brand new, just out of the box” instructions.