

Content

I.STAReBOOK's Profile	3
Product Features	4
Product specification	5
Accessories Overview	6
II.STAReBOOK Keypads Guide	6
Appearance and Key Guide.....	6
Buttons Function Guide	9
Particular Buttons Guide	10
III. STAReBOOK eBOOK Reading Guide	11
Menus Guide	11
Operation Guide	12
1. Reading Function	12
2. eBOOK Management.....	14
3. Files Download	15
4. MP3 Playback	16
5. Settings	16
IV. Caution and Warning	18
V. Guide of After-sales Service.....	21

I.STAReBOOK's Profile

Dear User:

Thank you for purchasing STAReBOOK as your preference.

By the devotion of eREAD Holding, the patent handset is the world's leading facility in the field of digital reading. The functions presented by STAReBOOK are so excellent that it will certainly bring you a pleasant whereas astonishing experience users have never expected for mobile fun reading.

Apart from the installation of the global leading E ink holding, STAReBOOK is a professional carrier specializing in the display and management of eBOOKs as well.

The emergence of STAReBOOK is an epochal revolution in human's reading history. Through a particular format, it brings a total new concept of digital publishing and an unanticipated configuration of stationary electronic files. According to the storage capacity of SD card which you select, a minimized personal library, thin, light and mobile, is now available to people of all ages. Anytime and anywhere, burden less but enjoy more, it's STSAReBOOK.

● Product Features

1. Extra-large black-white screen, display with e ink holding.
Four level gray level and high reflectance rate 600×800
2. Thin, light and easy to take. Ultra low power is required once the content is displayed when turning page.
3. Abundant content is available for download through the HYPERLINK "http://www.isoshu.com" http://www.isoshu.com in the format of STK.
4. To keep STK and MP3 files, external storage can be enlarged by inserting SD card.
5. Supporting MP3 files and music playback is available while reading
6. Unique design of 5 buttons (Up/Down/Left/Right/Confirm).
Easy to operate for users.
7. Multiple modes for power supply through adaptor, battery, USB port
8. SAMSUNG S3C2410A processor, main Frequency 200MHz
9. Font could be magnified in 5 grades
10. Dimension 188mm(L)×118mm(W)×8.5mm(H)
11. You may manage(inport, export and delete) the files in eBOOK through "My Bookshelf-eBOOK"of eREAD Reader in your computer.

● Product specification

Processor	Samsung S3C2410A 200MHz
Screen	Single Color Level 6.4 ' E-INK LCD Reflectance rate:600×800
Transmission Port	USB 2.0
Storage.	4M×32-bit SDRAM 4M Boot ROM 64M Data Flash
Storage Extension	SD Card(extendable to 1G)
Power Supply Mode	External connection : AC Adapter Input:AC100—240VOutput:5V Current output:1A 800 mAH Li-on USB
Weight	176g(Battery included)
OS	LINUX 2.4.18
Other function	Support MP3
Operation Condition	Work Temperature : 0~40°C Storage Temperature : -20~60°C Work Humidity : 20~85%RH Storage Humidity : 20~85%RH

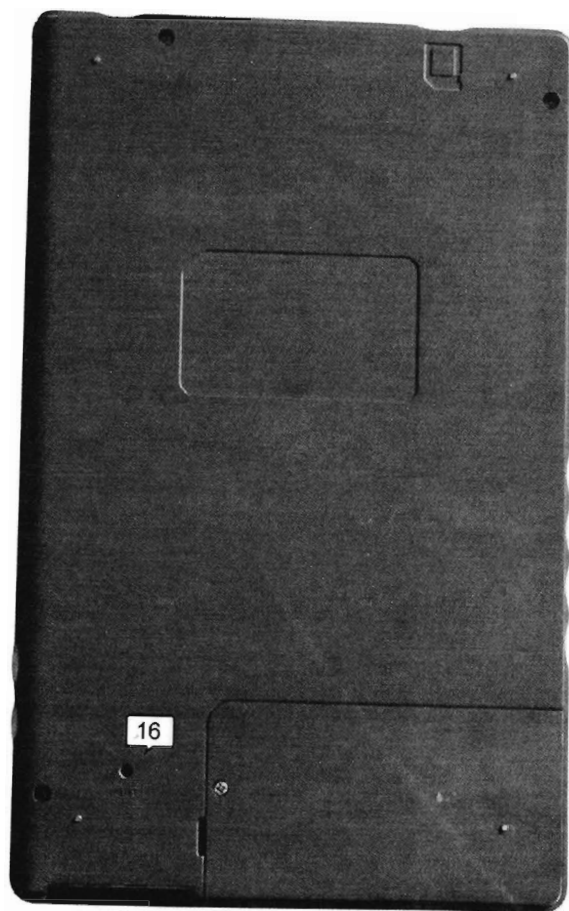
● Accessories Overview

- 1 : MP3 ear jack
- 2 : power adaptor
- 3 : USB transmission line
- 4 : leather coat
- 5 : Color cordon
- 6 : 512M SD card









II.STAReBOOK Keypads Guide

● Appearance and Key Guide





● Buttons Function Guide

- 1:  Power button : Turning power on and off
- 2:  Voice up : magnify voice
- 3:  Voice down : reduce voice
- 4:  Cursor keys (up arrow) : move the square up on Application Screen
- 5:  Cursor keys (Down arrow) : move the square down on Application Screen
- 6:  Cursor keys (Left arrow) : move the square to left on Application Screen
- 7:  Cursor keys (right arrow) : move the square to right on Application Screen
- 8:  Confirmation Button : Enter into program the square select

No sooner press the button, return the Main Menu


III. Delete Button


- ① MP3 file is deleted as soon as press the button at MP3 folder
- ② Book is deleted /removed as soon as press the button at books folder


III. STAReBOOK eBook Reading Guide


● Menus Guide

1. The Last Book : Displaying the last book you read
2. My Favorite : Saving the last 10 books you read
3. Internal Bookcase : Book menu kept in memory
4. External Bookcase : Book menu kept in SD Card
5. MP3 Music : Menu kept in memory and SD card
6. eBook Setting : Language Setting, Volume Setting,

9:  Music Button : go to MP3 menu directly

10:  Main Menu Button : go to Main Menu directly

11:  Return Button : end current function and return to previous menu

12:  Delete button : delete MP3/eBOOK files; move/duplicate books in or out of folders

13: USB port

14: Earphone port

15: SD port


16: Reset Button

● Particular Buttons Guide:





I.  Music Button

No sooner press the button, go directly to MP3 folder

II.  Main Menu

- ④ Press , enter the book content which you choose and page at where you end reading last time

(2) Reading Operation

- ① Press , turn over to the previous page. It is invalid if the present one is the first page.
- ② Press , turn over to the next page. It is invalid if the present one is the last page.
- ③ Press , magnify the font(5 grades is available)
- ④ Press , reduce the size of font(5 grades is available)

Remark :

Only the font of fictions can be magnified


Sleeping Setting, Music Setting, Memory Examination.

7. Operation Guide : Keypads Function, Reading Guide, Music Playing Guide, eBook Download Guide and eBook Setting Guide





● Operation Guide


1. Reading Function

(1) Book Menu Operation

Select My Favorite, Internal Bookcase/External Bookcase and press  for confirmation.


Enter Book Menu

- ① Press  , move square to select your fond book
- ② Press , go to the next page to select book
- ③ Press , go to another page of book menu

- ⑤ Press , fast turn over of pages is available

2. eBook Management


(1) Delete Books

- ① Select book targeted to delete and press 


- ② Choose Delete from the ejected menu

- ③ Press , delete the targeted book

(2) Book Duplication

- ① Select book designated to duplicate and press 

- ② Select Duplicate from the ejected menu

- ③ Press , start duplication(book would be duplicated from internal bookcase to external book case and vice versa)

3. Files Download








- (1) Any downloaded eBooks and MP3 can be enjoyed at any mode

- (2) Please ensure the transmission line is properly connected to the USB port of computer. Disk directory of eBook and the following animation page will show automatically if the connection is accurate. Please press any key if no download page is emerging.

Duplicate and transfer the files to the disk directory of eBook. The press of any key is useless under the state of download.

- (3) Pull out the USB transmission line after the download commission. Page will be directed to the main directory.










4. MP3 Playback

- (1) Select MP3 music, press  and go to music menu
- (2) Press   , move the square to select songs you prefer
- (3) Press  , go to the next page of music menu
- (4) Press  , go to the previous page of music menu
- (5) Press  , play the selected song. Move the square up or down, and then change to the play mode of other song. During the playing process of the selected song, music would stop if the button is pressed again.
- (6) Press  , delete the selected music files.

5. Settings

- (1) Language Setting : Set the language of system

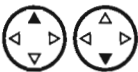

(e.g. Simplified Chinese, Traditional Chinese and English)

- ①   Press cursor up and down enter the setting menu you intend to set.
 - ② Press confirmation button  , finish setting and turn to eBOOK setting menu
- (2) Sleep Setting : set system sleeping time
- ①   Press cursor up and down, move square to select the sleeping time.
 - ②  Press confirmation button, finish setting and turn to eBOOK setting menu
- (3) Volume Setting: set the volume of system
- ①   Press cursor left and right, adjust the volume (left for reduction; right for increase)
 - ②  Press confirmation button, finish setting and

turn to eBook setting menu.

(4)Memory Examination : check the state of storage and SD card (Total capacity, Space occupied and Space Available)

(5)Music Setting : Set the Playing mode of MP3(Circulation Mode : Play music in sequence ; Random Mode : Automatically selected by the system ; Single Mode : Play one song)

- ①  Press cursor up and down, move the square to the mode you intend to set
- ②  Press confirmation button, finish setting and turn to eBook setting menu

IV. Caution and Warning

To operate safely and correctly, users are strictly

advised to observe the "Caution and Warning". Please make sure you have already learned about the following information before the start of application.

Application under such conditions is strictly forbidden since components and battery might be transfigured or damaged:

- Direct exposition under sunlight
- Operate in hot or extremely cold environment

As the product is not waterproof, please don't deposit at or operate in humid environment. Be careful of any liquid since this invasion may result in internal malfunction.

In case of dramatic vibration and fall off, please put it at even place.

For fear of screen crack, things of heavy weight are not allowed to put on the screen and forceful press is

forbidden.

To ensure a formal performance, put it away from dusty, dirty and erosive gas origins.

Don't clean the surface with chemical solvent if the screen or coat is contaminated. The application of soft cloth dipping some pure water or gentle acid solvent is strongly advised.

In case of damages, don't open/ disassemble the product privately .Only the company and the accredited maintainer are eligible to provide the related service.

For fear of causing a hurt to kids, don't put the product and components at place where the kids can reach.

In case of magnetic harassment, don't put it at the nearby of magnetic field.

Please use the accredited components and don't adopt

components that do not match.

V. Guide of After-sales Service

In case of any problem happening in the application, eREAD will offer a free maintenance service as long as the product accorded to the maintenance condition.

- From the date of purchase, free maintenance and limited repair will be valid within 12 months (accessories 3 months), present(s), consuming part(s) and failures, damages caused by misapplication are excluded, but paid service is ensured.
- In case of the occurrence of problems within the period of quality guaranty, replacement, exclude present(s) and accessory (ies), is allowed if the same problem, as it is used to be, can not be solved after a second repair.

For answer of product's question, please contact the Customer Service Center of the eREAD Holding Co., Ltd.

- The guaranteed repair period of the fixed Products will be counted upon the remained period or extended another 90 days. Take the longer one as final.
- Invoice ,Repair Guaranty Card and other solid bills that contain both of the info of the purchase date and place are required
- Limited repair service is not applicable to users under the following conditions:

Wrong storage under abnormal condition:

- Unauthorized change, connection, repair, negligence, misapplication and accident. Wrong installation, adjustment or other operation and control go beyond

the reasonable application of STAReBOOK, including the lack of consuming parts and the reasonable consumption of the products.

- eREAD has not received any failure notification or quality complain from user during the period of quality guaranty.
- Applied, connected with components or products that are not originated from eREAD.

Repair Guaranty Card

Model No.

Serial No.

Date of Purchase

Invoice No.

User's Info

User's Name

Tel:

E-mail

Post Code:

Add:

Dealer's Info

Store Name

Tel:

Post Code:

Store Add:

Seller:

Seal of Store(Valid Upon Seal)

Remark:

1. The guaranty is only valid for the model list above.
2. Damages result from water penetration or misapplications are not bound to the scope of maintenance. As to maintenance scope, please refer to the "Conditions of Maintenance".
3. Please keep the guaranty properly and present it together with the invoice whenever maintenance is necessary.
4. No card is valid if without the accreditation of eREAD Holding Co., Ltd and the seal of the store.