

ASTAK

EZ READER

USER'S MANUAL

V1.1

Contents

Safety Notice	1
Your ASTAK EZ Reader	4
Start using your EZ Reader	6
Installing Battery	6
Charging the battery	6
Installing SD card.....	9
Switch On/Off.....	10
Keyboard Lock.....	12
Downloading books is easy!	13
Moving books and music from your computer to the EZ Reader.....	14
Search.....	15
Searching by page	15
Search by sorting	17
Search by order.....	18
Recent File Reading	19
Switch between Bookshelves.....	20
Reading EZ Reader	21
Page Turning.....	21
Page turning by sequence.....	21

First/Last Page	22
Page Jump	22
Zoom In/Out	24
Bookmark	25
Index	28
Information of Book	30
Adjust the contrast and brightness of pictures	31
MP3	32
System Setting.....	34
Key Sound	35
Language Setting	36
Replacing Font.....	37
System Information	38
USB Connection	39
Troubleshooting	41
Specifications	42
After-sales Service Guide	43

Safety Notice

For safe and efficient use of this product, please strictly abide by the rules, otherwise you will void your warranty and/or damage the device.

Do not put the product under the direct sunlight, or expose it to an extra high or low temperature environment. Failure to do this may cause distortion of the product and damage of the electronic components and battery.

Do not put or use it in a humid environment. Do not expose your new EZ Reader to water or any liquid or excessive dampness as this will cause the malfunction of operation of the internal circuits.

Do not violently shake the product or drop it as this will cause the damage of the product and its electronic components.

Do not heavily press the display panel or put

objects on the display. We are not responsible for improper carrying or storage during travels.

Do not put the product in a dusty, dirty place. Use common sense! This is a fine instrument and should be treated as such.

Do not use chemical solvents to clean the surface of the product. Please use a soft cloth to wipe up the dust from the surface of the screen or the cover. You can use a little distilled water on a clean cloth to remove the dirt on the screen or the cover.

Do not disassemble the product. There are no user serviceable parts. You will void your warranty and damage the device!

Please pay attention to store the product or its accessories in a safe place, where children or pets cannot reach it!

Do not put the product near a magnetic field or improper current.

Please use the authorized accessories, do not use unmatched components.

Battery:


- * Do not use the rechargeable battery if there is visible surface damage.

- * If the battery leaks liquid, please clean the product and call toll free customer support number for replacement of new battery within warranty period. Battery acid can be harmful to you also, so use considerable caution!


- * Please properly recycle of the old batteries. Do not just throw into the garbage!! This is the law!! This product saves energy!! Please assume stewardship for the earth!

This product is CE approved.

Your ASTAK EZ Reader

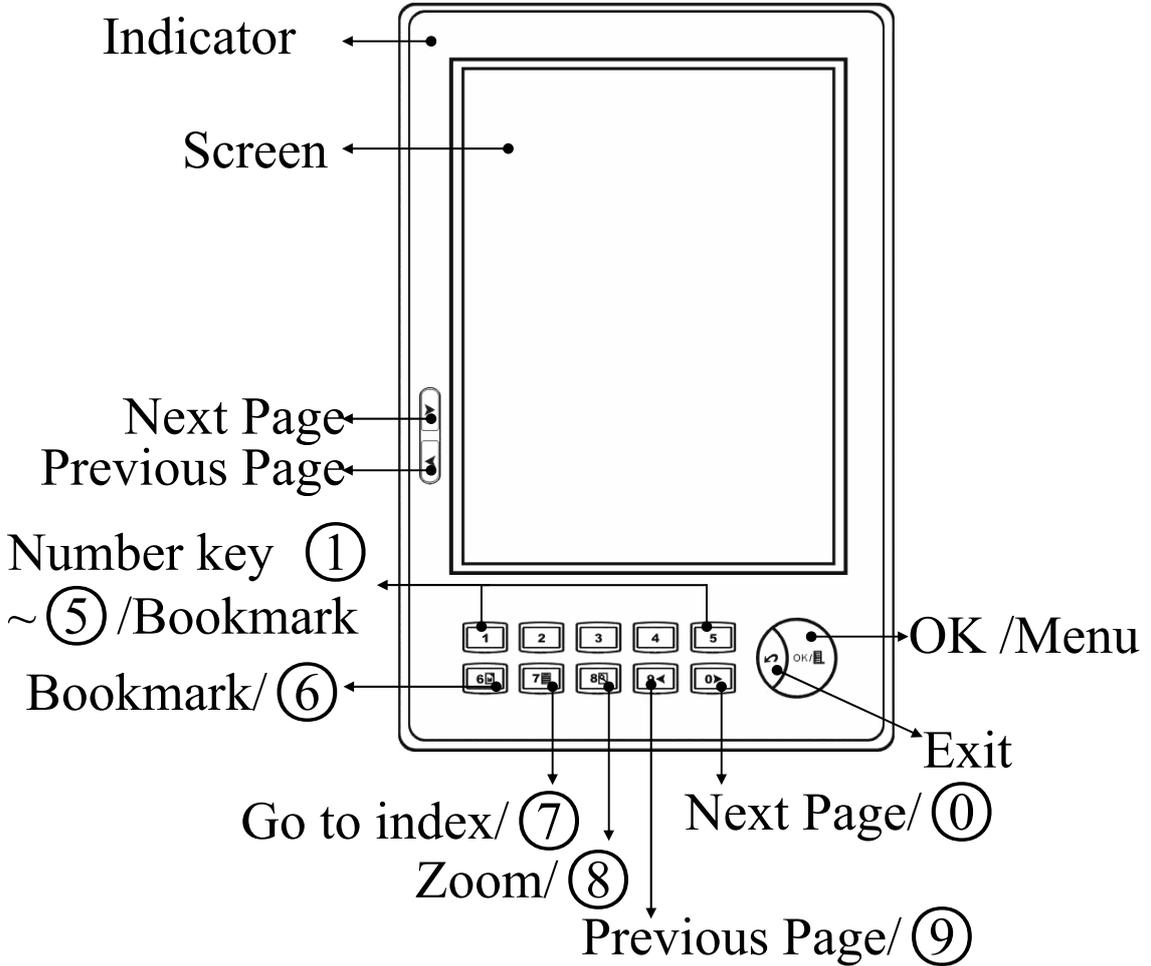

Front View

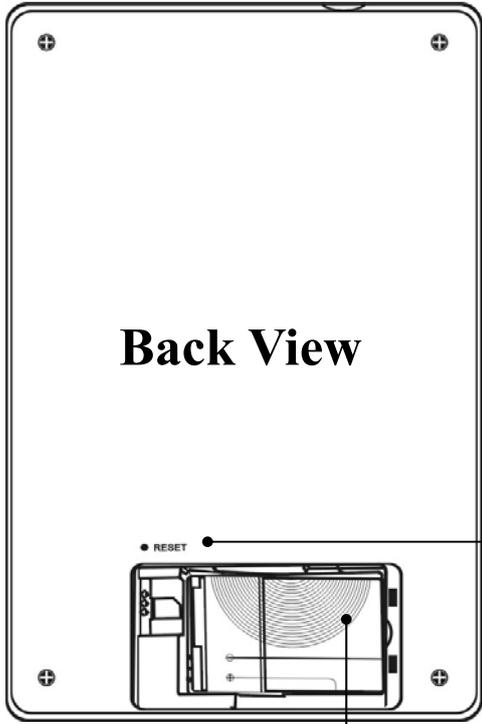

Back View



Side View

Reset

Volume Up (+)
/ Down(-)


Rechargeable
Battery



Power On/Off

SD Card Slot

Top View

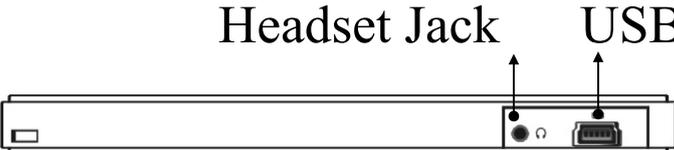

Headset Jack

USB Port


Bottom View

Read the cautions below very carefully and fully! This is a fine instrument and you do not yet know HOW to keep it working beautifully! LEARN what to do!

Start using your EZ Reader


Installing Battery

Open the battery cover on the back of the device.

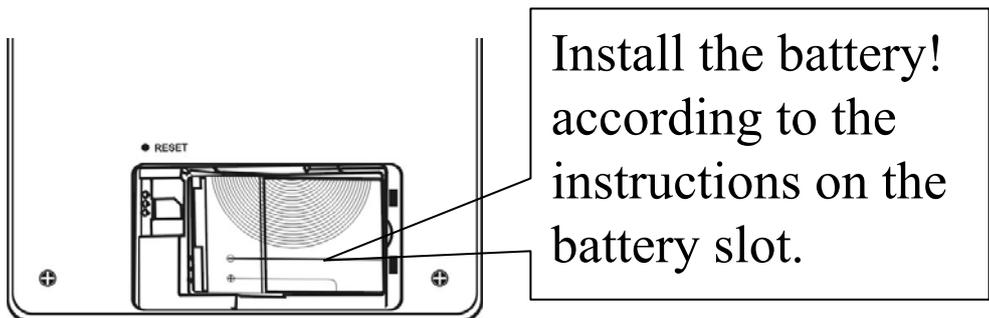

Place battery as illustrated!

Charging the battery

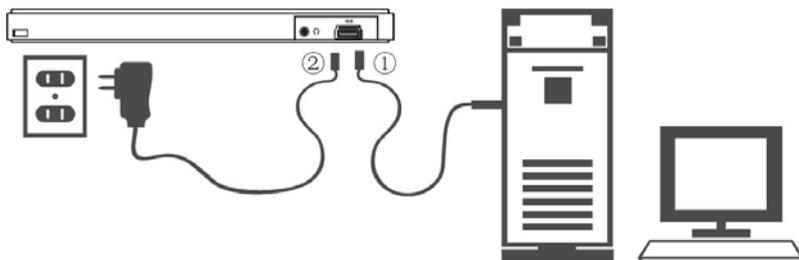

* The Power supply of this product is used for rechargeable battery.

* The battery should be charged at least twelve hours when first utilized. It's better to recharge it after its power is completely drained to encourage the battery to charge fully each time! Please do the above-mentioned process at least during the first three times of use.

* It can be charged by USB cable ①. Use one port of the USB cable to connect to the PC, the other port connects to the device. It takes approximately three hours to charge the battery fully. The orange light will flash while the battery is charging and green light will shine steady when the battery is fully charged.

* It can be also charged by power adapter. ② Connect the device with the power adapter, and plug the power adapter in the socket (please see the voltage scope on the adapter). It takes approximately three hours to charge the battery. The orange light will flash while the battery is charging and green light will shine steady when

the battery is fully charged.

* Do not remove the battery while charging.

* The battery capacity icon is on the bottom right corner. When the icon shows one grid volume or system informs low battery volume: please recharge the battery.



Full —————> Low (please recharge)

* The device can be used while charging, but the charging time will be increased.

* When the battery is charged at beginning period, if the indicator is still red, this means the power is not enough for startup, please disconnect USB cable and then reconnect it.


* Do not use unauthorized battery and/or charger. This is critical! Many chargers look alike but operate on different voltage or amperage!

* Do not remove the battery while charging is in progress.


* Make positive you insert the battery with the

correct polarity into the polarized contacts. You can damage the battery and/or device otherwise and void your warranty or start a fire.

Installing SD card

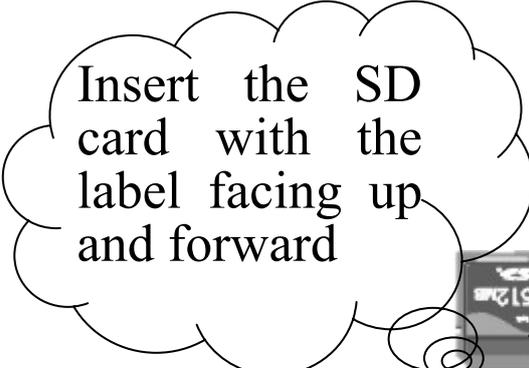

Insert the SD card with the label facing up and forward

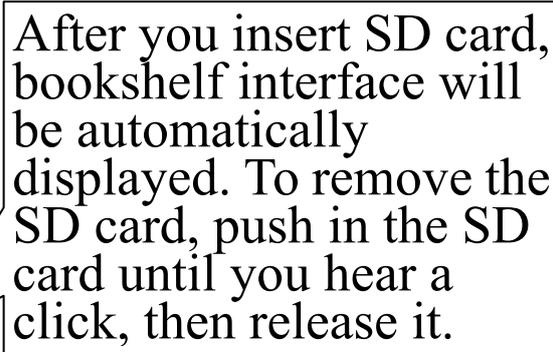

After you insert SD card, bookshelf interface will be automatically displayed. To remove the SD card, push in the SD card until you hear a click, then release it.




Insert the SD card carefully and properly! Do not attempt to force it in! Reverse the card in the slot if it does not go in easily. It should insert easily and lock itself into place if done right!

Switch On/Off

Switch on:

Press and hold on/off button to power on.
(Silver button on top of device).

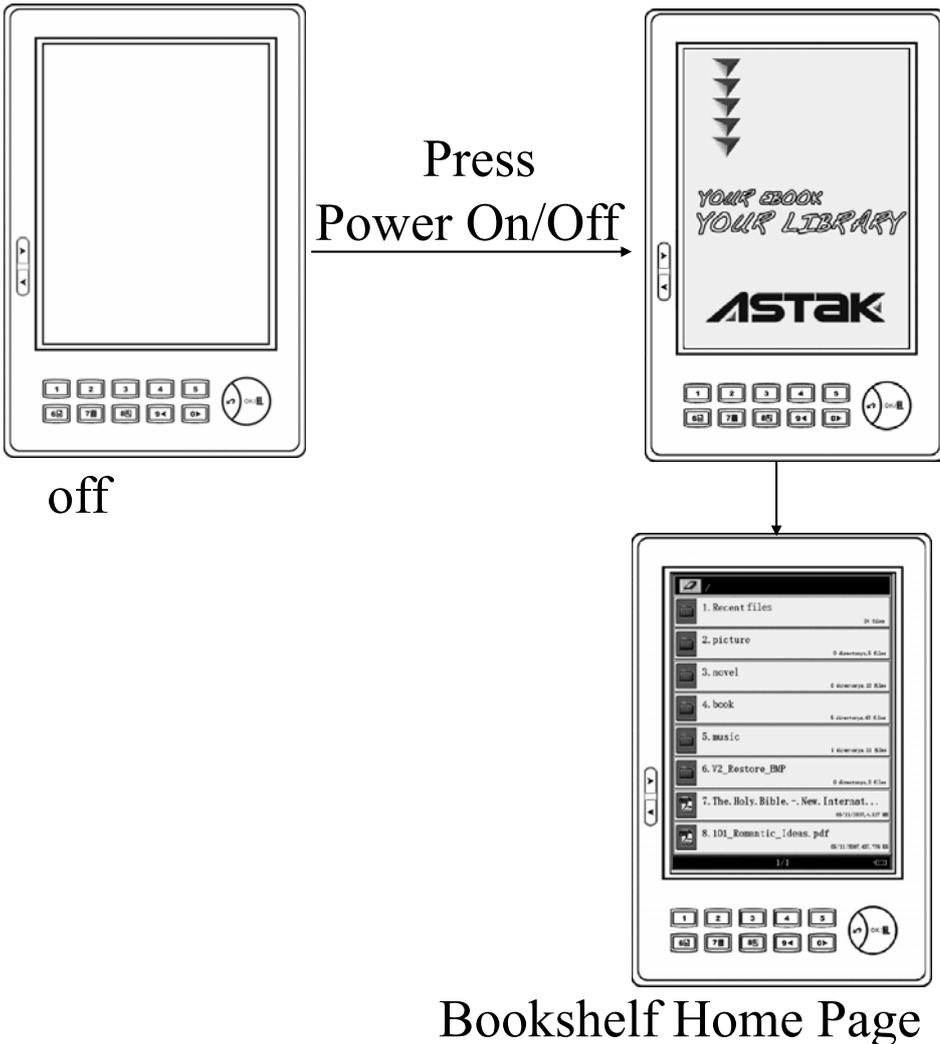



Switch off:

Press and hold the on/off button for about three seconds to turn the power off.



Any Interface

Press and Hold
Power On/Off

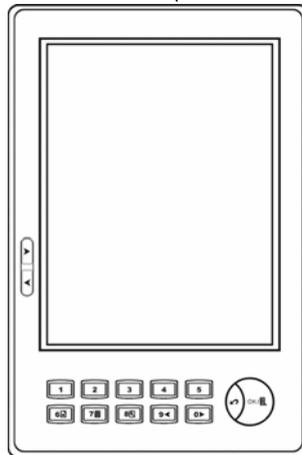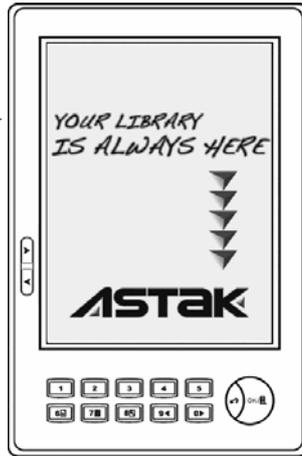

Power off


Keyboard Lock

Press on/off button shortly, lock/unlock keyboard.



Any interface

Power
On/Off

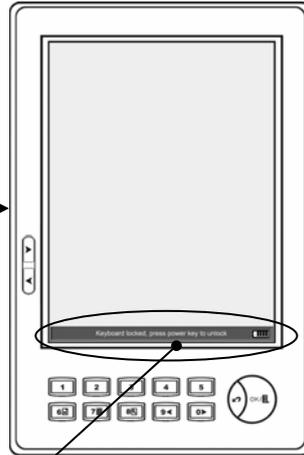

Lock keyboard



Downloading books is easy!

The Astak-approved website is:

www.mobiebook.com

Use the web browser on your desktop or notebook computer to go to this site! There you will find all the latest and greatest books in the Mobipocket format that your EZ Reader requires.

Whether you like The Classics or Comedy or Drama or Action/Adventure... you can download easily from this website into any dedicated file on your computer such as “My Books” (as a suggestion).

Note: Check to make certain that your computer has a relatively newer operating system that will work for such downloading. Most will without any trouble! Check with the website for Apple Compatibility.

Moving books and music from your computer to the EZ Reader

With your computer “on”, connect your EZ Reader via USB cable to your computer. Turn on the EZ Reader and press “OK” button. This should bring up a “What do you want Windows to do” dialogue box. Choose “Open Folder to View Files”. This should bring up all of the folders that you have on your SD card or in your device embedded memory.

After this window is opened, everything is just “Copy” and “Paste”. Minimize the Opened EZ Reader screen on the computer, open “My Books” or “My Music” or “My Pictures”... click on what you want in the EZ Reader... right click and choose “Copy”... and then drop it into the EZ Reader file screen you just minimized by hitting “Paste”.

Make sure your music you load is MP3 formatted and your pictures are JPEG only of less than 1GB.

That is about all there is to it! The download from the EZ Reader Screen on your computer to your EZ Reader is effectively “automatic”.

For “encrypted, DRM, and other formatted books...look for information on:

www.moiebook.com


Search

Searching by page


Under the bookshelf interface, each page displays up to eight titles. Press page turning button to go to previous or next page; or press and hold down the page turning button to turn ten pages at one time. User can use the number keys (①~⑧) to select the title for reading.



Quick press to
move to previous
or next bookshelf

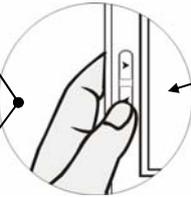


Press and hold to
turn 10 pages at
one time

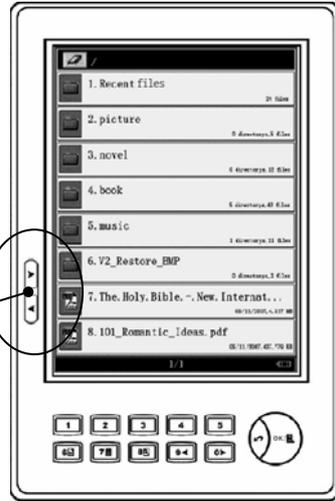

Main Bookshelf


Press ①~⑧ ↓ ↑ Press Exit (↶)

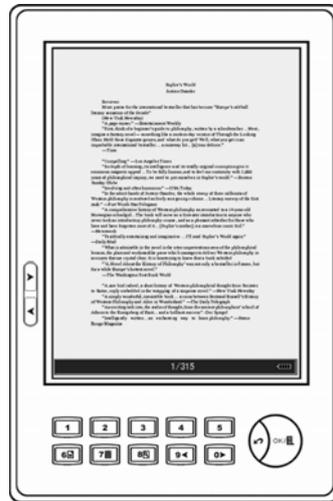

Text


Search by sorting

User can save the books of the same type in the same folder. The device can support multi-level folders. Press the number keys (①~⑧) to enter into the sub-folder.

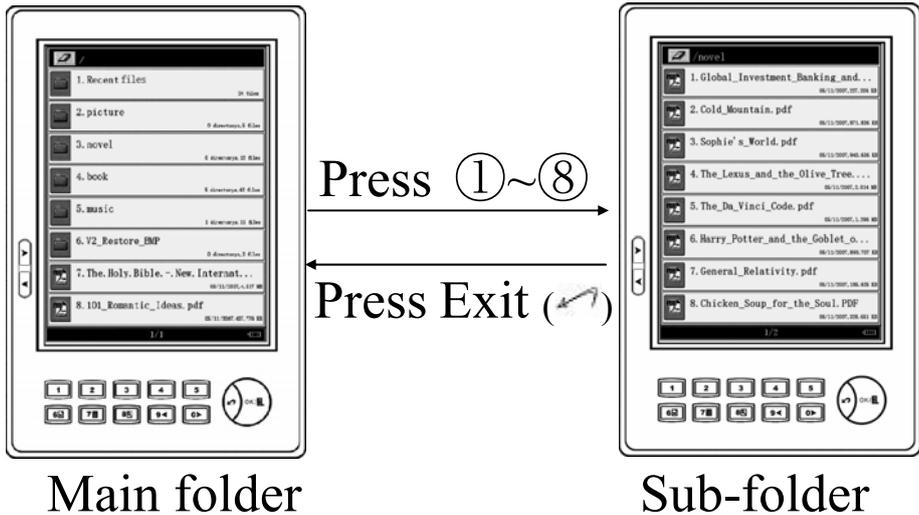

Search by order


Under bookshelf interface, press “OK” to display the menu, press number keys ②~④ to choose the order methods.

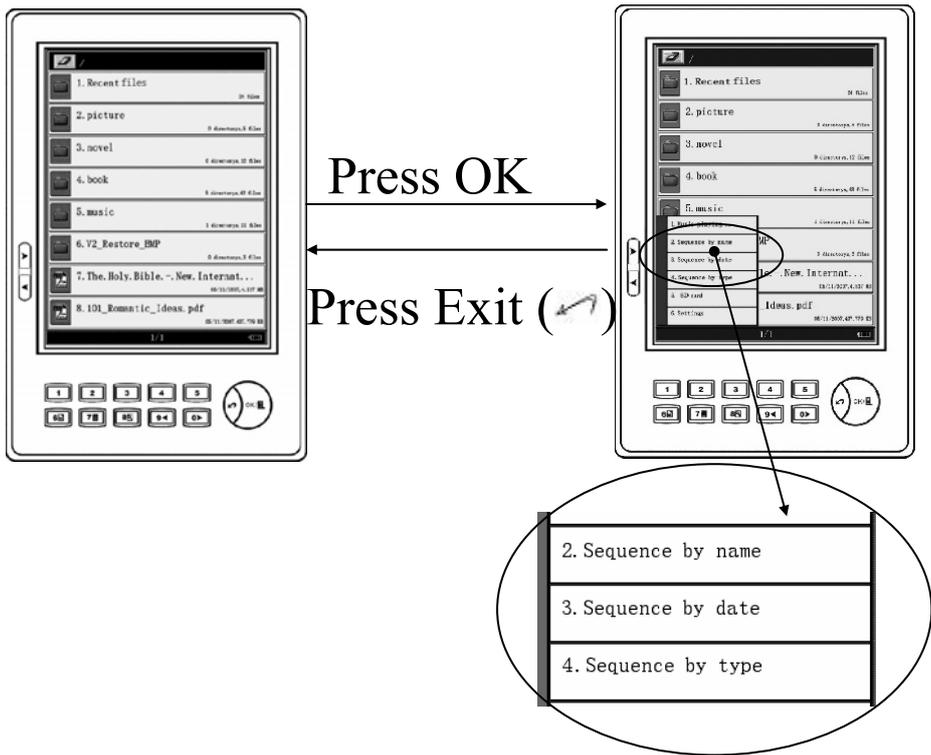

Recent File Reading

Recently Reading: the books which have been recently read can be saved in the “Recent File” folder.

In the home page of the main bookshelf, press number key ① to enter into The “Recent File” folder.

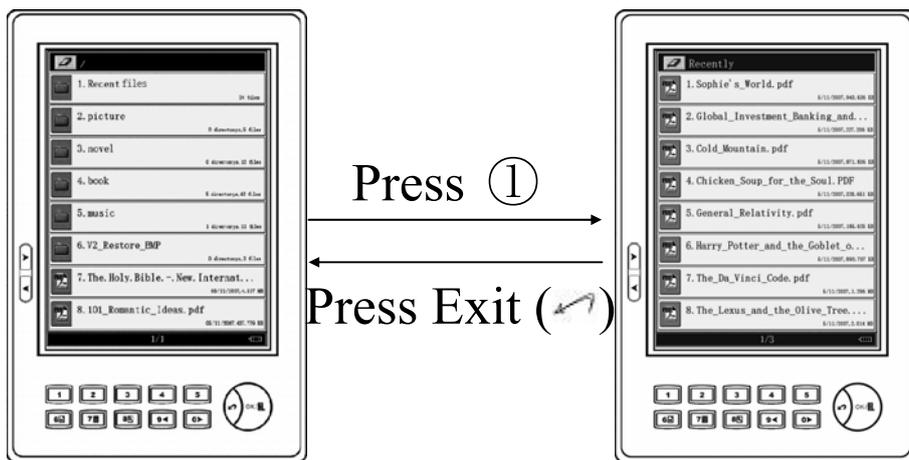


Home page of main bookshelf

“Recent File” Folder

Switch between Bookshelves

Under bookshelf interface, press OK to show menu; pressing number key ⑤ can switch between the bookshelves of SD card and internal bookshelves.

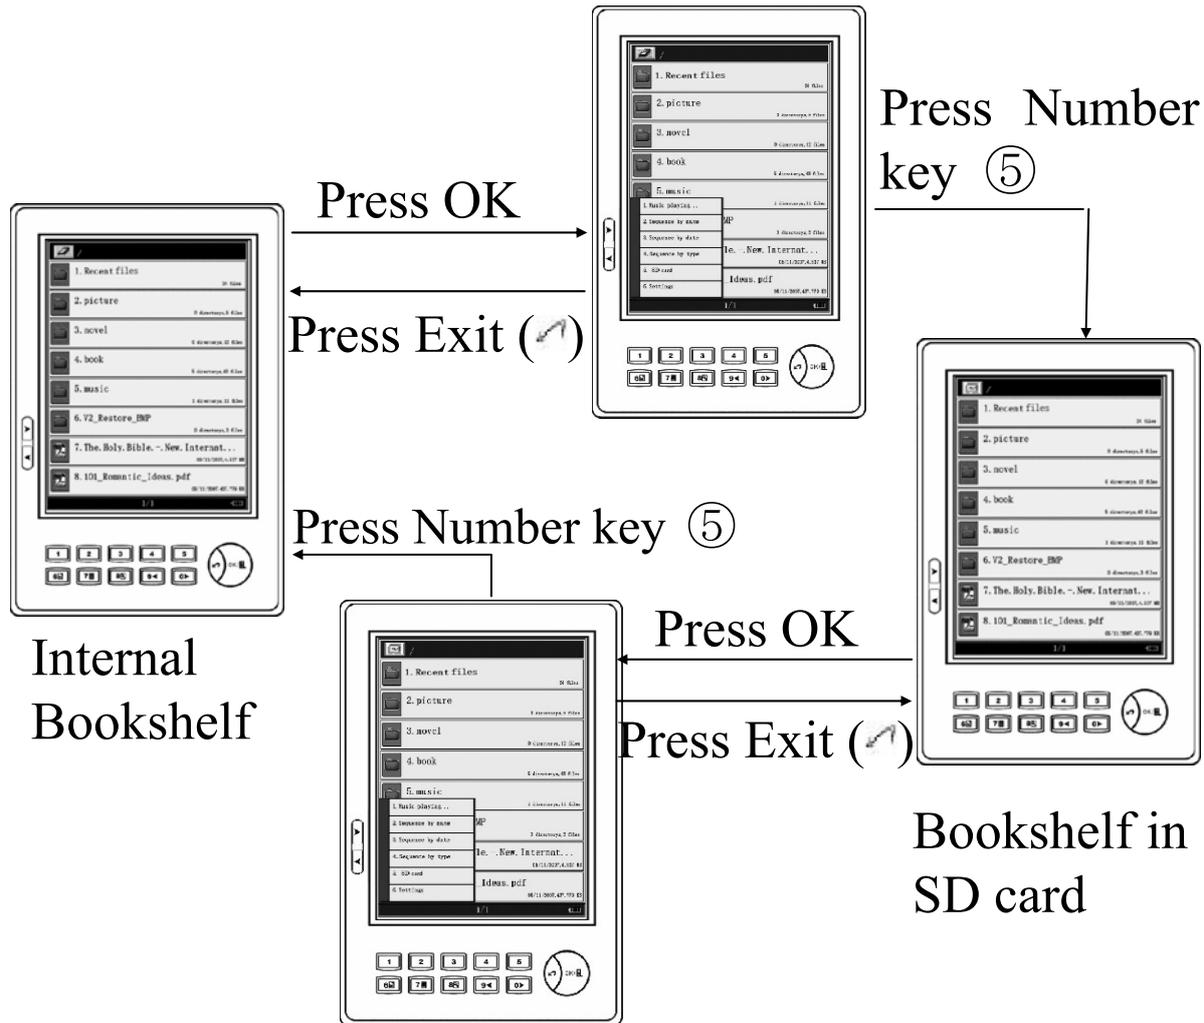


Reading EZ Reader

Page Turning


Page turning by sequence

Under text interface, press page turning button or number key ⑨ (previous) and ⑩ (next) to turn pages by sequence.

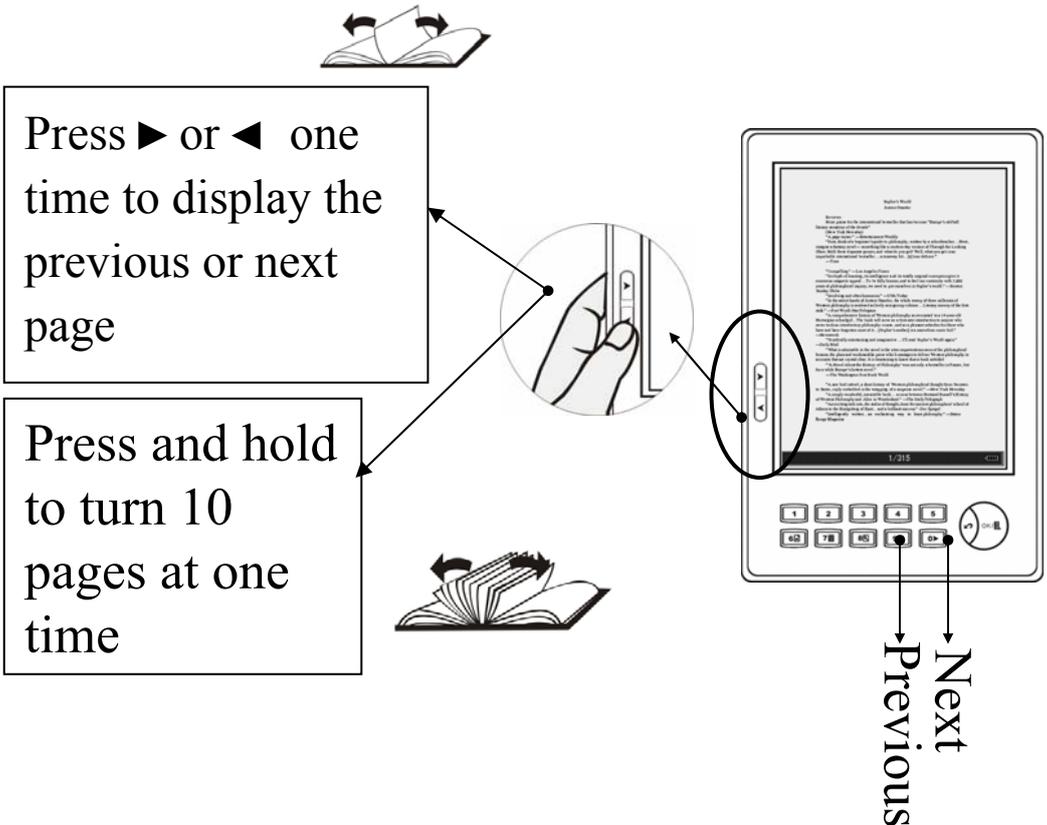

First/Last Page


Under text interface, press OK to display the menu, then press ① to display the first page; press ② to display the last page. (Images file doesn't support this function.)

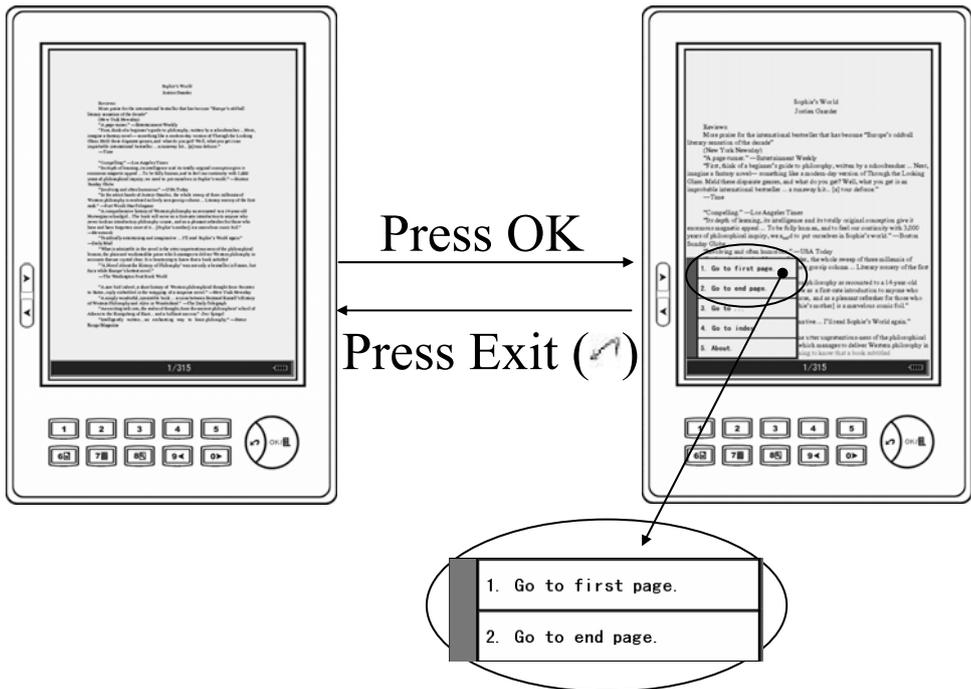

Page Jump

Under text interface, press OK to display the menu, then press ③ to enter into the jump page function. (Images file doesn't support this

function.)

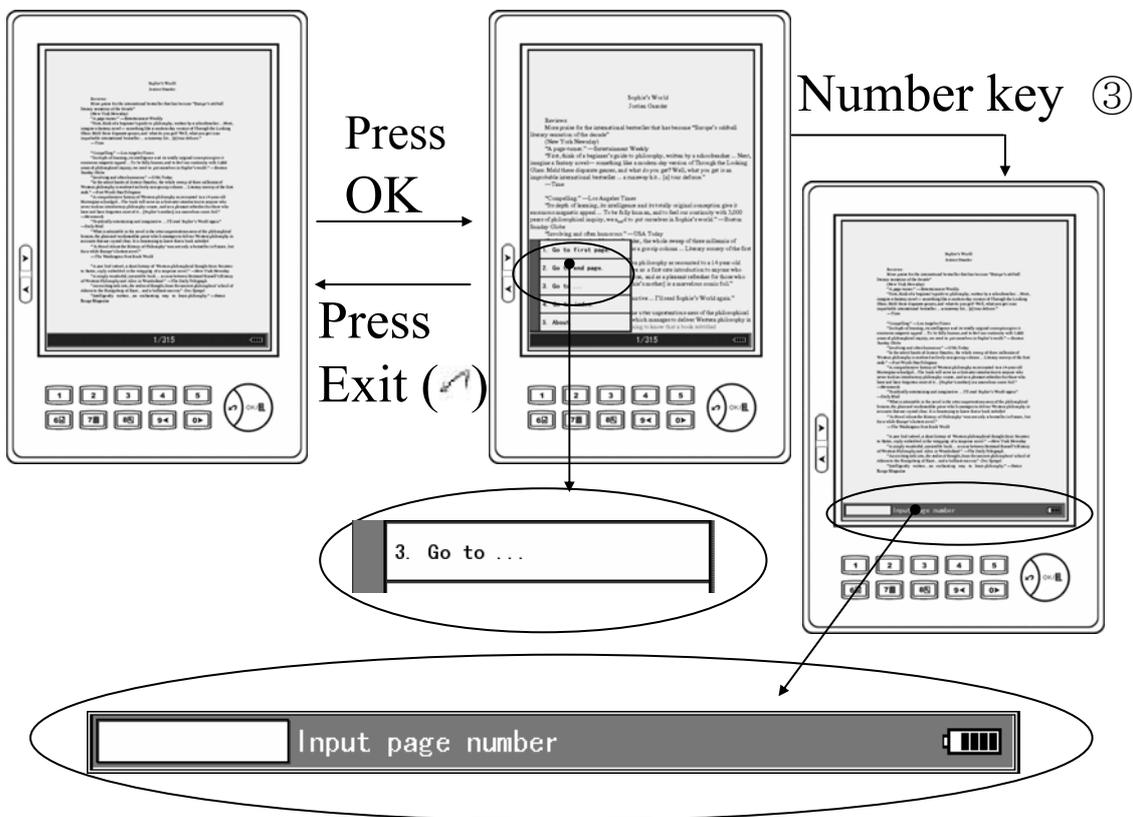


Press ① ~ ⑩ to enter the page number and press OK to jump page.

During the process of entering the page number, press “exit” (↵) to delete the entered number. If no page number is entered, press “exit” (↵) to quit this function.

Zoom In/Out

Three levels of zoom in/out are supported: Normal, Full screen, Double.


When it is in Double mode, the text will be automatically changed to horizontal.

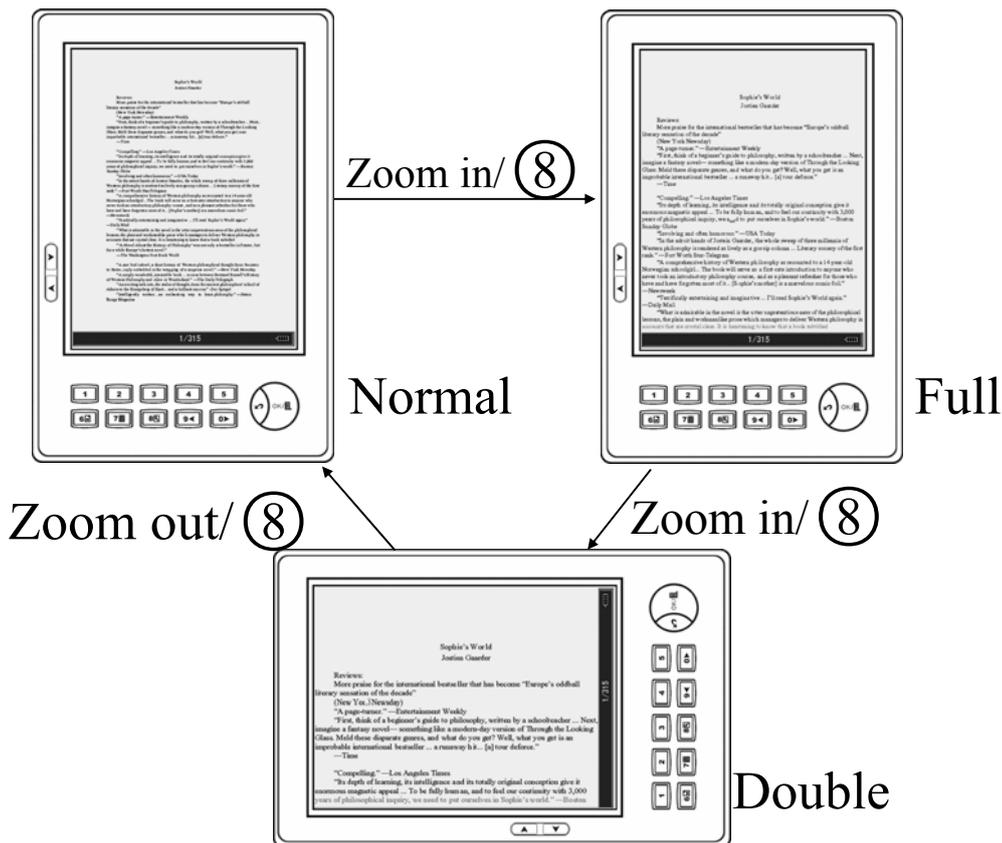

Bookmark

Bookmark operation:

- ① The current page without bookmark
- ① The current page with bookmark
- If the number keys aren't used as bookmark, the icon of the number key won't show in the status bar.

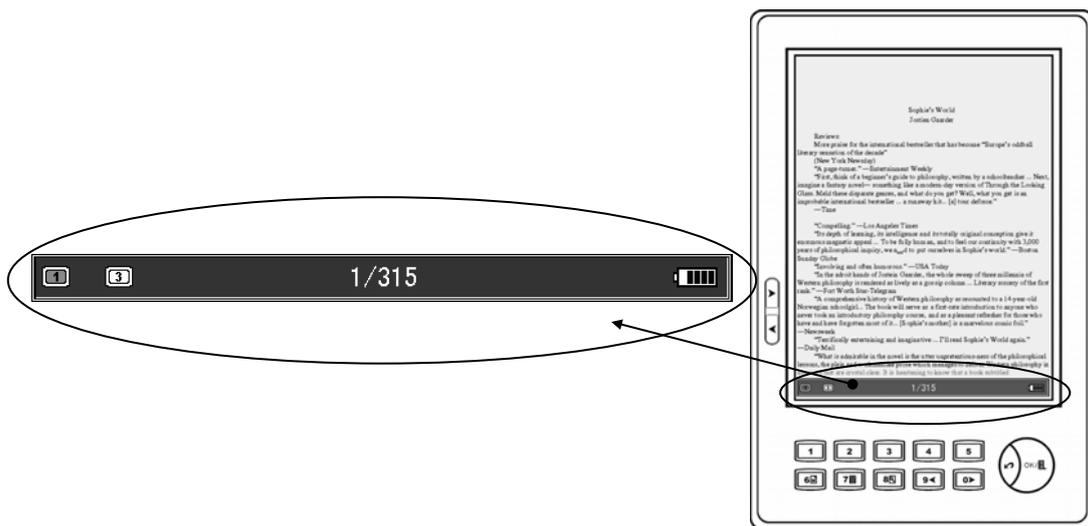

Add Bookmark:

Press number keys ① ~ ⑤ to directly add bookmarks.

Replace Bookmark:

If the current number key you want to use as the bookmark is already used, you may press and hold the current number key for 3 seconds, then the previous page with bookmark will be replaced by the current page.


Clear Bookmark:

Go back to the page with bookmark; press the number key to clear the bookmark.


Check Bookmark:

Hold and press number key ⑥ for 3 seconds to enter into checking bookmark status, then all the details of the bookmark will be listed.


Press number keys ①~⑤ to jump to the page with bookmark.

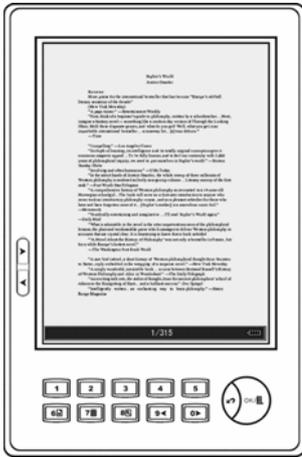

Press and Hold
Number key ⑥
← Press Exit ()

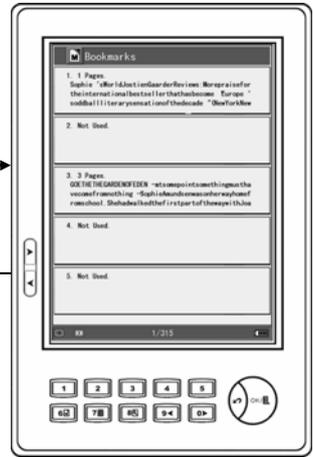


Press ①~⑤

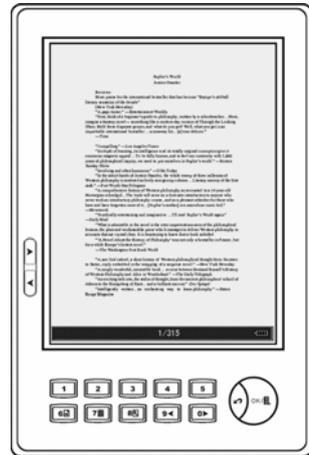


Index

Under the text interface, press “Go to index/⑦” button to enter into the index interface. The system can support multi-level index. Press number keys ①~⑧ to enter into the index of next level, if the current index is the last level index, press the number key to go to the chapter of the book or press Exit to return to previous level index. (TXT, HTML, Images file doesn't support this function.)

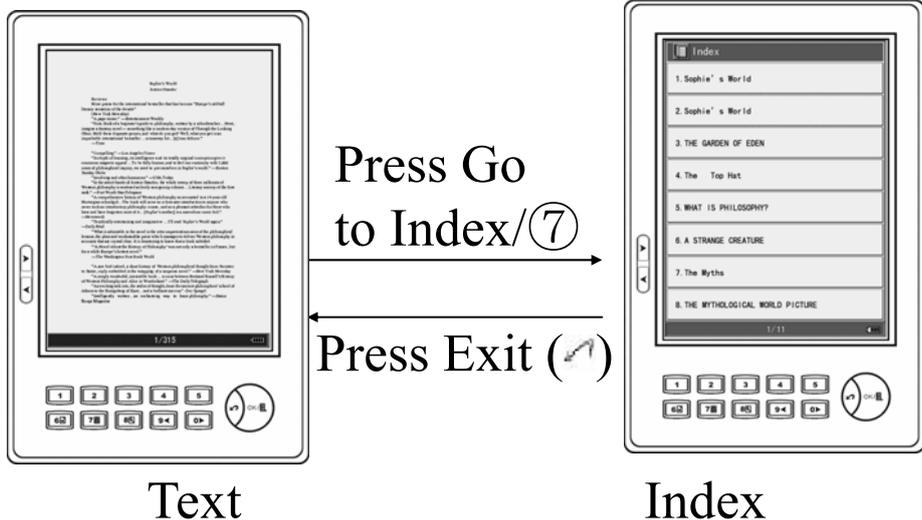


Under the text interface, press OK to display the menu, and select “Go to index” by pressing the number key ④.

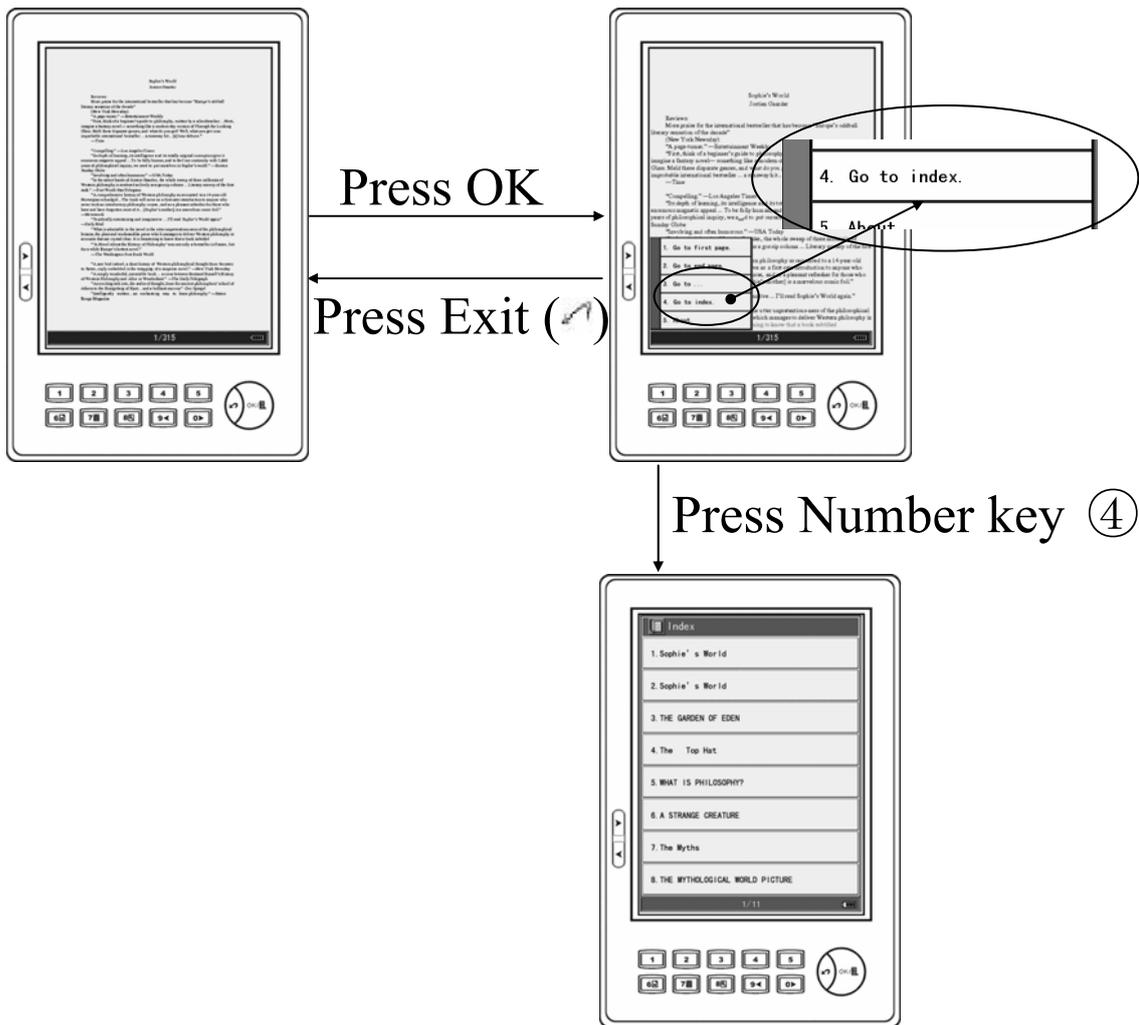


Information of Book

Under the text interface, press OK to display the menu, and select the “About” by pressing the number key ⑤, then all the information of the book will be displayed, which include ISBN, author, file name, publisher, publishing date, copyright, price etc. (Different book may have different items.)

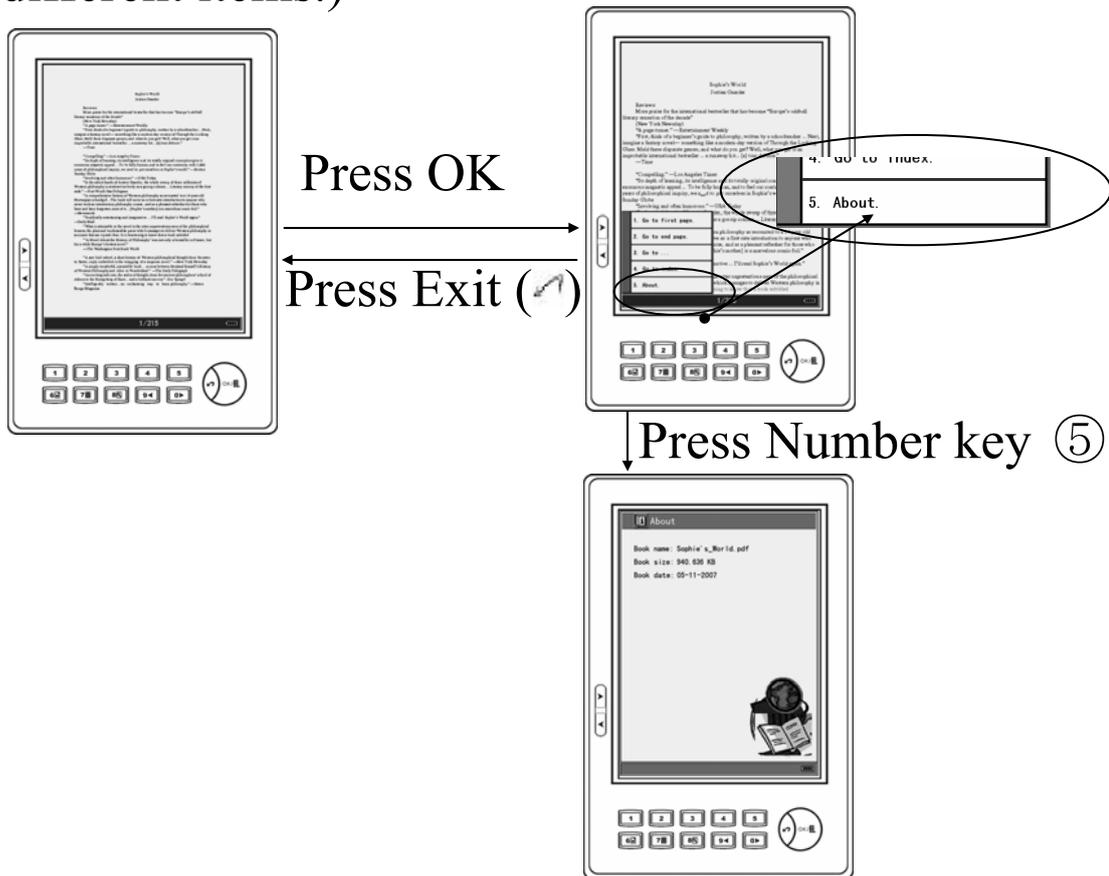


Adjust the contrast and brightness of pictures

When browsing pictures, the contrast and brightness can be adjusted, press 'OK' and use '▼▲' to switch between contrast and brightness, the icon ◀ will be changed as well.

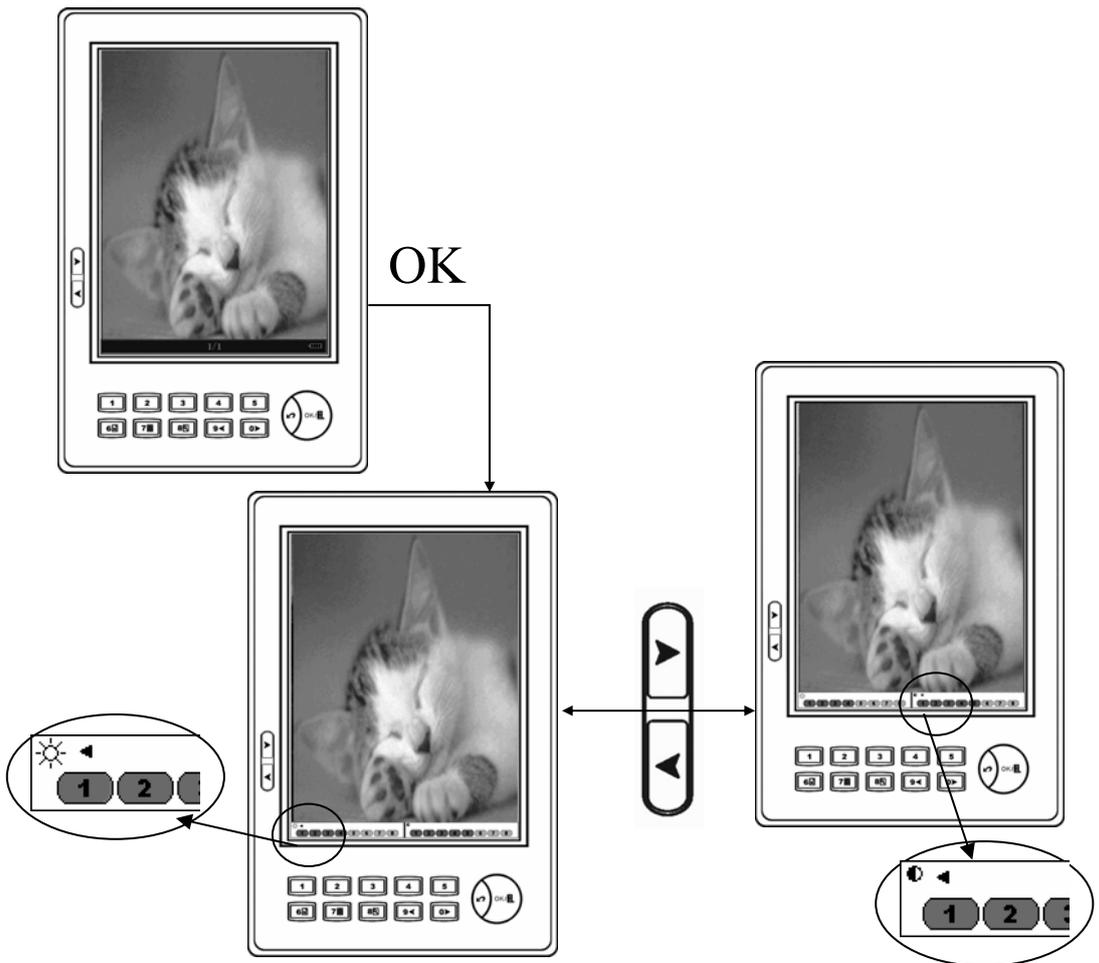

Press number key ①~⑧ to adjust contrast or brightness directly, press number key ⑨ (down) and number key ⑩ (up) to configure levels, press 'OK' to finish configuration.

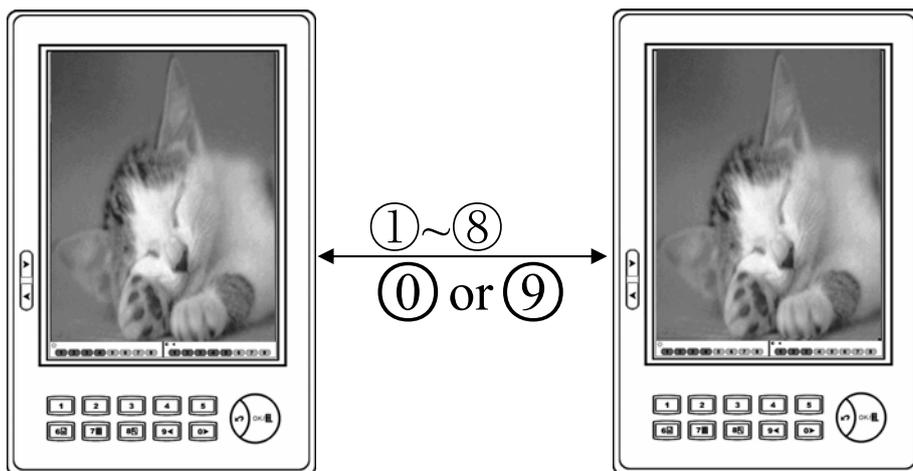


MP3

Under the bookshelf interface, press the corresponding number key to play the MP3 file. During the playing process, press OK to display the menu, and then press the number key 1 to enter into Music Play function.

The Music Play function will display all information of the current MP3, including title,


baud rate, playing time etc.

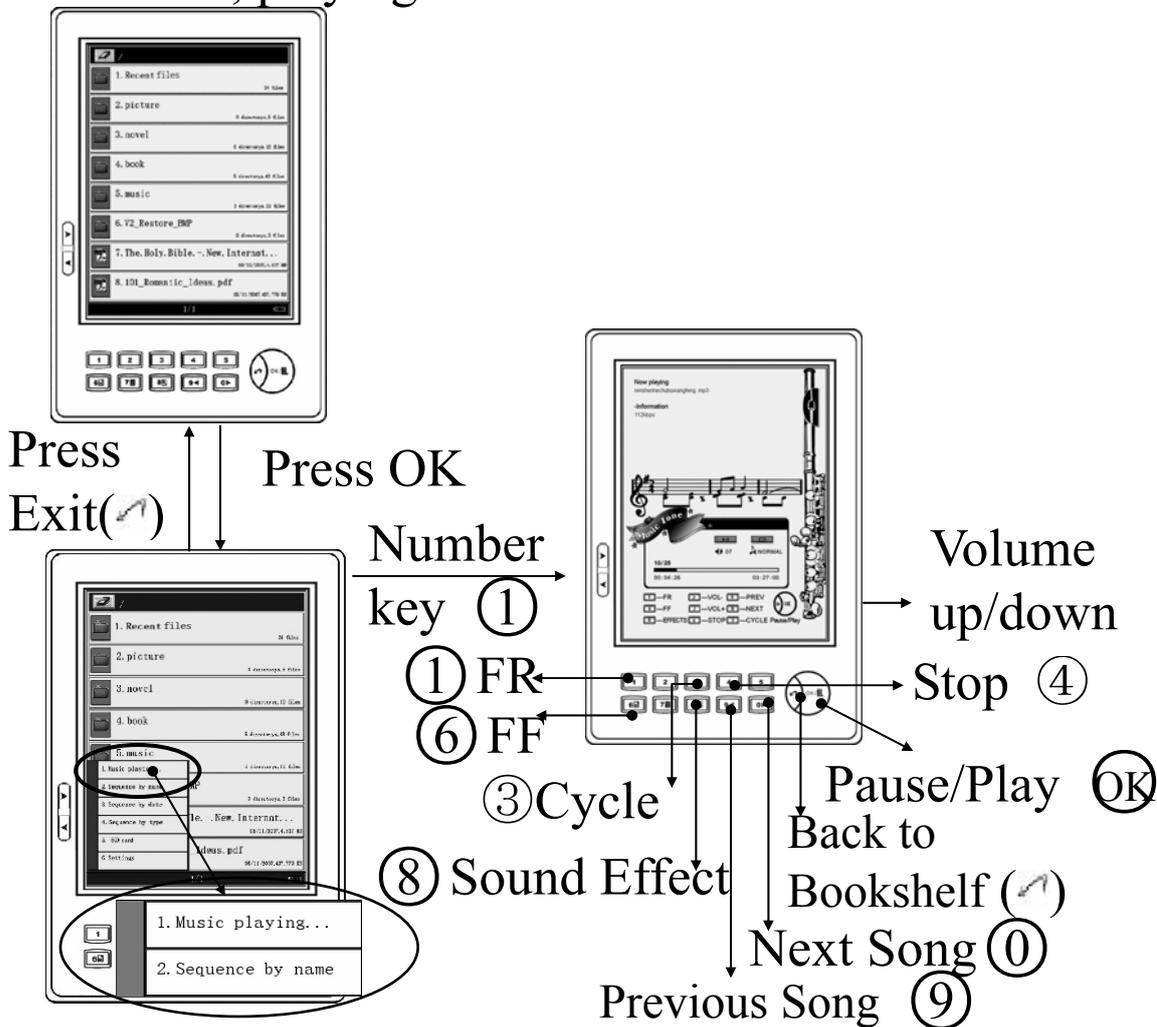

Note: This unit plays stereo music, and it takes a 3.5mm jack for either ear buds or headphones. We recommend a good pair (perhaps noise-canceling type) as this unit has great sound.


System Setting

Under the bookshelf interface, press OK to display menu, press number key ⑥ to enter into the system setting function, which includes sound key setting, language setting, replacing font and product information.

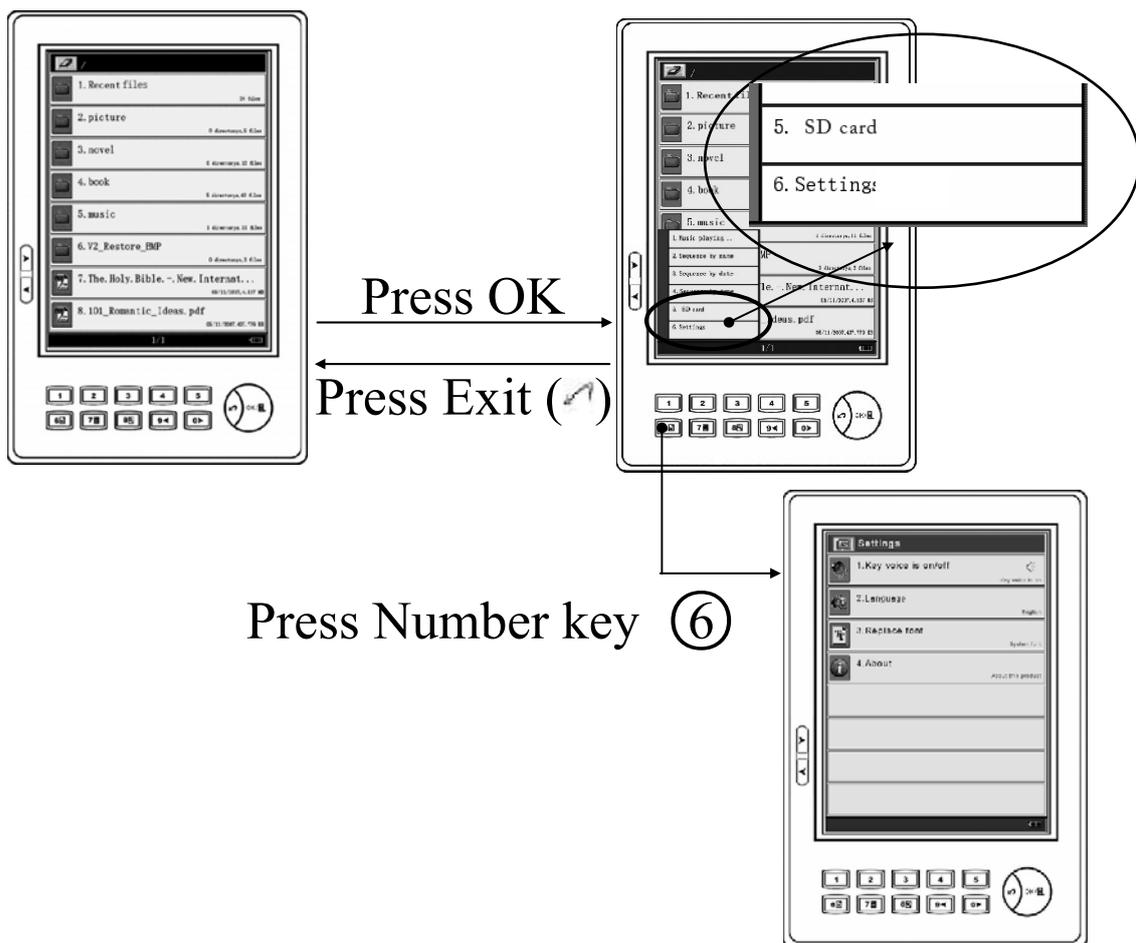


Key Sound

Under the system setting interface, press number key ① to turn on/ turn off the sound of the key.

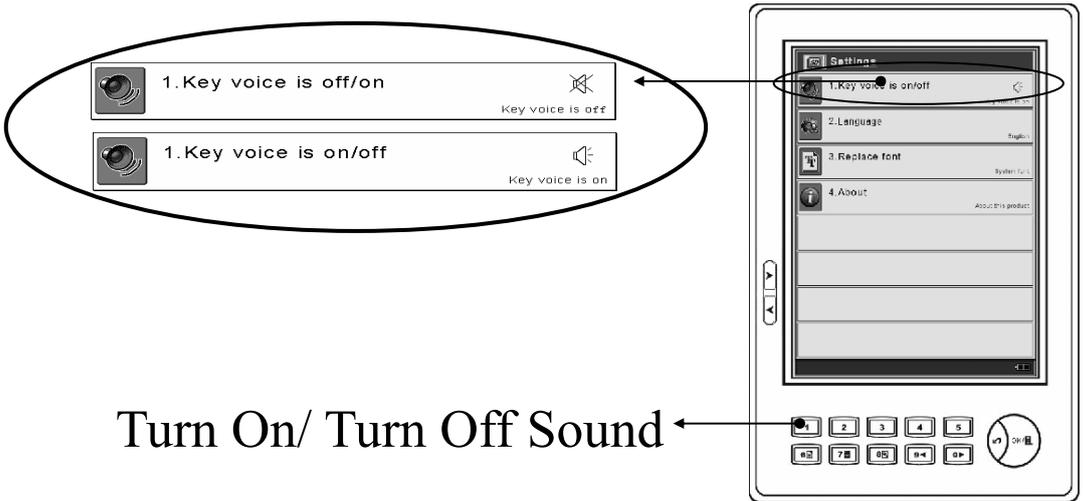


Language Setting

Under the system setting interface, press number key ② to enter into language selection interface, select language by pressing the opposite number key.

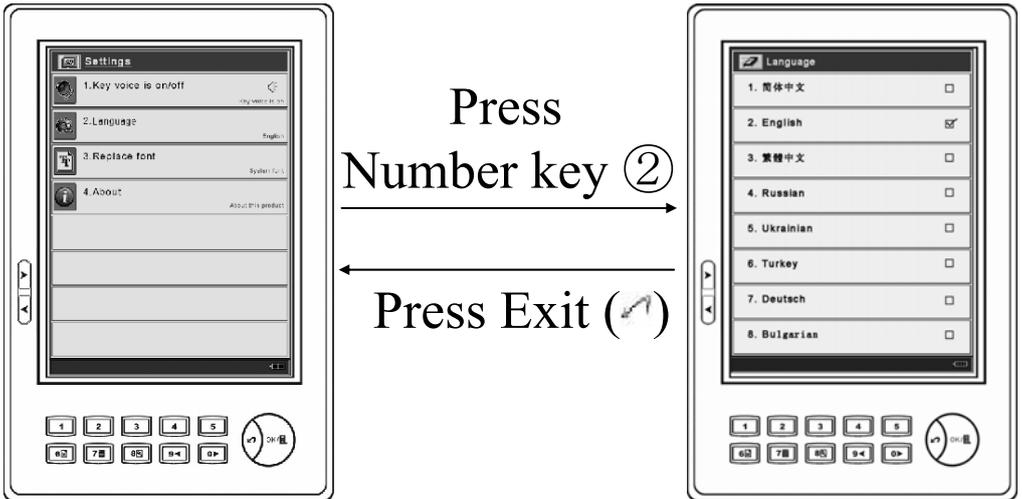


Replacing Font

Under the interface of system setting, press number key ③ to enter into the “replace font” interface, and select the key to choose font. (The TTF files are saved in the font folder of the root index of SD card.)

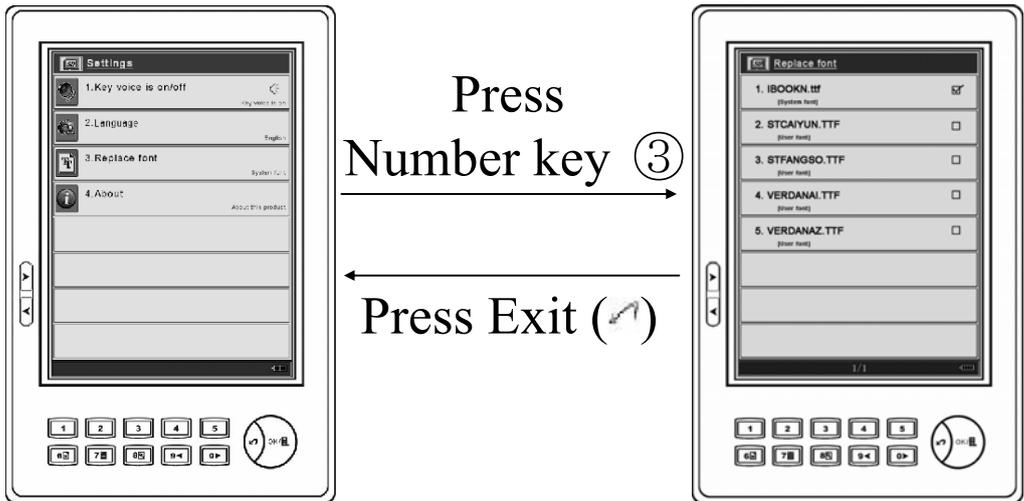


System Information

Under the system setting interface, press number key ④ to check the information of system version.

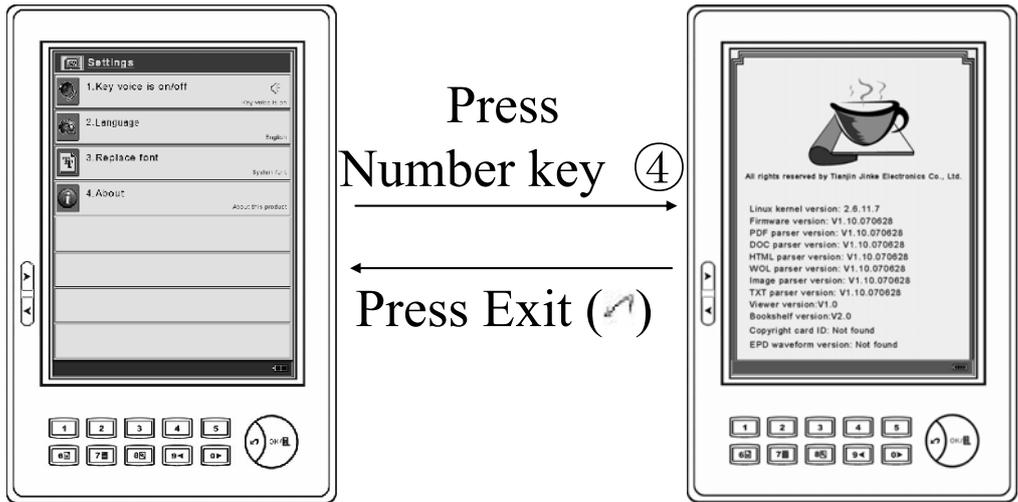

USB Connection

The device can directly connect to the computer by the USB cable which supports the plug and play function. After connection, the “Removable disk” will automatically display in the “My Computer”. (Note: before disconnecting the USB cable, the operations of book reading will not work.) See the following picture:

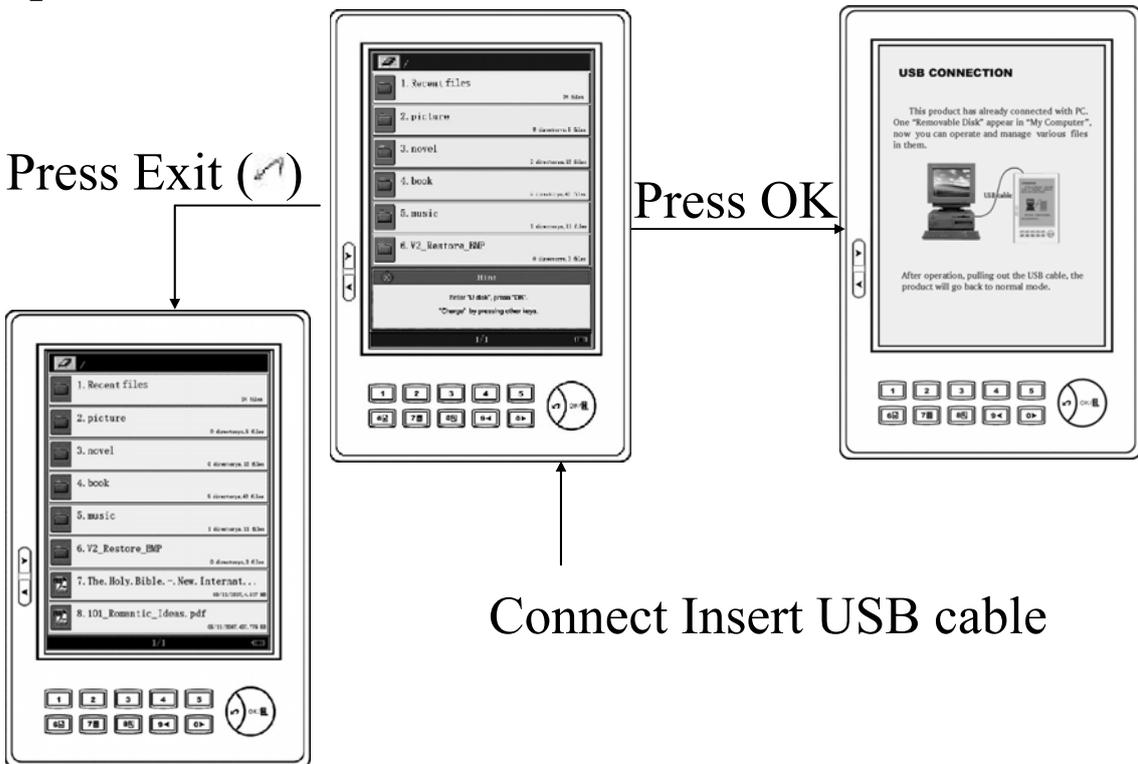

How to confirm copying the data to the SD card

Under the Windows system, the data may not immediately copy to the SD card, the data will be firstly copied to the cache, therefore it needs to be confirmed.

Confirmation Method: When the indicator doesn't flash, click the "Removable disk" with the right button of the mouse, select "Eject" of the menu (In Windows2000 or Windows XP, need to select "pull out or eject hardware"), then pull out the USB cable.



After unplugging the USB cable, it will go back to the bookshelf interface, and then you may read the books with the SD card.

Troubleshooting

If the EZ Reader does not function, please try the following ways to solve the problem.

- 1、 Press and hold the power button for three seconds, turning the power off, and then switch on the product again.
- 2、 Reset the product by pressing reset button or press and hold the power button for 10 full seconds.

Specifications

Hardware	CPU: Samsung Arm9 200MHz
Screen	ePaper (E-Ink technology) 6 Inches 600*800 pixel 4 grayscale
Dimensions	7.2 inch (L) x 4.7 inch (W) x 0.3 inch (H)
Operating System	Linux OS
Format Natively Support	PDF, DOC, RTF, HTML, TXT, MP3, WOL, CHM, RAR/ZIP, FB2, Djvu, Epub, BMP, JPG, LIT, PRC, PDB
Storage	NAND FLASH
Memory	SDRAM:32MB, Internal 2MB NOR FLASH
I/O	3.5mm stereo audio jack for headset USB 1.1 Port SD card slot (support up to 4GB)
Weight	7.8 oz (include battery)
Battery	Li-ION 950mAh
Operation Temperature	32°F to 104°F
Storage Temperature	-4°F to 131°F

After-sales Service Guide

Terms of Limited Warranty Service:

Under the terms of Limited Warranty Service, Astak will provide free repair or replace (our choice) for any parts or labor problems that were caused by mis-manufacturing problems.

The Warranty period of 12 months on the product starts on the original date of purchasing as clearly shown on the sales invoice. Accessories are warranted 3 months! Service is without charge for: limited repair and/or replacement (not including the fault and damage caused by wear, improper care or use, artificial factors by customer and appearance problems, etc.)

You must have the original invoice (valid receipt)! If you have any questions, please contact Astak service department by calling toll-free to:

1-866-368-8788 or by sending an email to: rmaebook@astak.com. Product returned to us without an RMA (Retuned Merchandise Authorization) will not be processed! You are responsible for safe shipment.

Any charges or repair bills before the product arrives will be at the sole expense of customer.

What this Warranty Does not Cover:

- * Damage resulting from vibration, collision, abuse, water (liquid) damage, and misuse;
- * Storing under improper conditions; exposing in unsuitable environment such as high humidity, higher or lower temperature; immersed by liquid; caused by undue force and other factors.
- * Failures resulting from unauthorized repair or attempts to repair, improper connection, misuse (including but not limited to use of any backup component, other than that authorized by Astak), neglect, abuse, tampering, modification

and incorrect installment, error operation by customer, or other factors surpassing reasonable usage and control, abrasion, crushing or evidence of dropping.

* We do not receive notice of failure or quality problem of the product from customer within the warranty period.

* Deleted, damaged, altered or forged series number of the product.

* If the warranty period expires, the expenses of maintenance and service will be charged according to the general service policy of Astak, and provide a 90 days warranty period after the paid repair

Benefits provided by this warranty depend on all rights and compensation due by and of the compulsory laws of the USA.

There will be no advanced notice for any change of any terms of warranty, product

functions and specifications.

Special Note: Astak is not responsible for the loss of SD cards or purchased books or music that may occur during repairs. **KEEP YOUR SD CARD** when you send the unit for repairs (only with approved RMA). We strongly suggest you save your books and music on a computer before sending for repairs!