

Quick Start Guide

Turn On/Off



Press and hold the **Power** button at the bottom of the device.

Accessory List



AC Adaptor

 


Pouch




USB Cable

Main Screen Icons

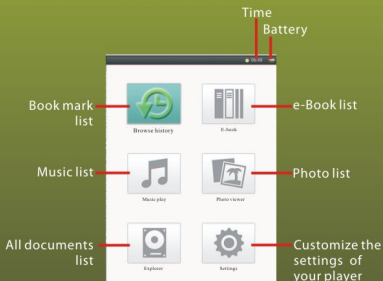

Unit View Discription

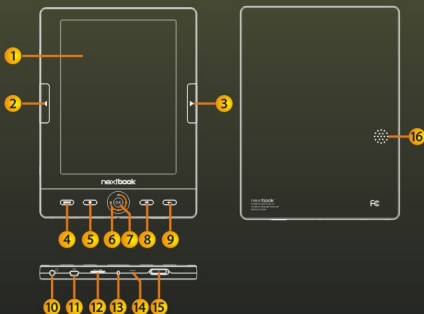 

- 1 Display
- 2 Previous Page
- 3 Next Page
- 4 MENU button
- 5 ZOOM button
- 6 Direction buttons
- 7 OK button
- 8 **PLAY/PAUSE button**
- 9 RETURN button
- 10 Earphone port
- 11 USB port
- 12 Micro SD Card slot
- 13 Charge indicate LED
- 14 Reset pin hole
- 15 POWER button
- 16 Speaker

Quick Start Guide

Quick Step to Use

1 Connect nextbook to your computer.

Connect Next to your computer using the supplied USB cable.



2 Install Adobe Digital Edition (ADE) on your desktop.

- Download Adobe Digital Edition (ADE) from <http://www.adobe.com>.
- Install Adobe Digital Edition (ADE) on your PC / MAC.
- Follow the on-screen instruction to register a user ID with Adobe.



3 Download and Open

Download the Ebooks in Adobe Epub or PDF format

When pop up file, click OPEN. It will automatically open from Adobe digital Edition (ADE) application.

4 Library

Go to Library view in ADE, drag and drop the Ebook onto Nextbook Device

5 Enjoy reading!



Transferring Files

1 Connect your NEXT-BOOK to a computer with the supplied USB cable.

- When the player is connected to your computer. A "Removable Disk" is displayed.
 - Drag and drop the desired files (including music, photo, e-book) from your computer to the removable disk.
- NOTE: Please do not disconnect the USB cable during loading. It may cause malfunction of the player and the files.

2 After transfer is finished, please disconnect the player from the computer.

- Left click "🗑️" icon on the taskbar.
- Click the pop-up mini-window with the "Stop the USB Mass Storage Device-Driver(X)" message.
- When you are prompted to remove the device, you can unplug the player safely.


Safety Advice



We strongly recommend that you observe the usage precautions laid out in this instruction. In no event will ZERO be liable for any indirect, incidental, special or consequential damages to any persons caused by ZERO's negligence, or for any lost profits, lost savings, loss of use, lost revenues or lost data arising from or relating to this device, even if ZERO has been advised of the possibility of such damages. In no event will ZERO's liability or damages to you or any other person ever exceed the amount paid by you for the device, regardless of the form of the claim. Some countries/states do not allow the limitations or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to you.

nextbook™

MODEL#NEXT1

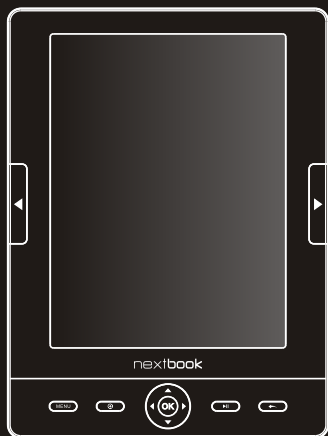

User's Manual

TABLE OF CONTENTS

Introduction	1
Regulatory Information: FCC Part 15	2
Important Safety Precautions	3
Main Features	4
Overview	5
Getting Started	6
System requirements	6
Copy Files from computer	6
Connect to the power	7
Charging the battery.....	7
Insert memory card	8
Basic operation	8
Turn on/off the Player	8
Reset the Player	8
Enter the main menu	9
Browse history	10
E-book reading	10
Enjoying Music	11
Viewing Photos	13
Explorer	13
Setting	14
Troubleshooting	15
Specification	16

Introduction

Thank you for purchasing this E-book player.

This manual contains important safety information and operation instructions, so please read all the instructions carefully before using the player and keep it for future reference.

This manual will help you use all of the exciting features to make your player use more enjoyable.

We have done our best to produce a complete and accurate manual; however, we cannot ensure there are no errors or omissions. We also have no responsibility for damages or loss of data caused by improper operation.

The instruction manual is subject to change for improvement without notice.

Trademarks and trade names used in this user manual are owned by their respective companies or organizations.

Regulatory Information: FCC Part 15

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Important Safety Precautions

Always follow these basic safety precautions when using your player. This will reduce the risk of product damage and personal injury.

- Do not disassemble, repair or modify the player by yourself. Refer servicing to qualified personnel.
- Do not dispose of the player in fire to avoid explosion because the player has built-in battery.
- Do not touch the player with bare hands if the built-in battery is leaking. In this case, contact service center for help since the liquid may remain in the player. If your body or clothes has contacted with the battery liquid, wash it off thoroughly with water. Also, if some of liquid gets into your eyes, do not rub your eyes but immediately wash them with clean water, and consult a doctor.
- Keep the player away from direct sunlight and heat source.
- Do not expose the unit to rain or moisture to avoid any malfunction.
- Do not use the player in rather dry environment to avoid static.
- Never apply heavy impact on the player like dropping it or placing it on the magnet.
- Route USB cable so that people and pets are not likely to trip over or accidentally pull on them as they move around or walk through the area.
- Disconnect the USB cable from the computer when you do not use the player for a long time.
- Clean only with dry cloth. Make sure the player is turned off before cleaning. Do not use liquid cleanser.
- Be sure to back up your files. We will not be liable for the loss of data due to improper operation, repair or other causes.

Precautions in using the headphone

- Do not use the headphone while driving an automobile or riding a bicycle. It is not only dangerous, but also against the law. To avoid an accident, do not turn up the volume of the headphones too high while walking.
- It is not recommended that you use the headphones at a high volume for an extended time as this may cause hearing damage.



Cleaning


- Before cleaning the E-book player make sure it is turned off.
- Never spray or pour liquid directly onto the screen or plastic casing.
- To clean the LCD screen, wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner on a clean, soft, lint-free cloth to clean the screen.
- To clean the plastic casing, use a soft, dry cloth. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based, mildly non-abrasive detergent on a clean, soft, lint-free cloth to clean the surface.
- To clean the frame, use a soft, dry cloth.

Disclaimer: Authorized Dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing. Some chemical cleaners have been reported to damage the screen and/or display case. Authorized Dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

Main Features

- Thin, Light and Sleek Design
- 7" TFT Color Display
- 800 x 600 High Resolution
- Built-in Battery
- Built-in Memory to Store the Ebooks
- Built-in Speaker
- Micro SD Card Slot for Memory Expansion
- MP3 & Photo Viewer
- Comes with an Elegant Cover

Overview

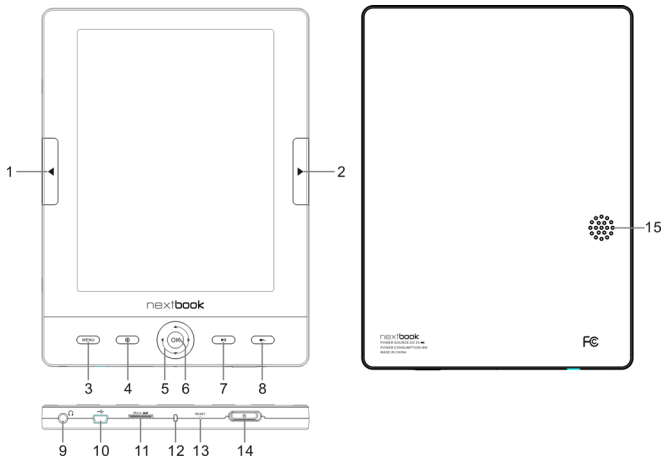

1. Previous page
2. Next page
3. MENU
4. ZOOM
5. 4 directions
6. OK
7. PLAY/PAUSE (unlock)
8. Return

9. Earphone Jack
10. USB port
11. Micro SD card slot
12. Charge indicate LED
13. RESET
14. POWER button
15. Speaker

Getting Started

System requirements

Your computer system must meet the following requirements:

- Pentium 200MHz or above
- Win 2000, XP, Vista, Win 7
- USB port supported

Copy Files from computer


Files can be transferred directly into the player by using the USB data cable or the synchronous transmission with Adobe digital editions.

1. Make sure that your computer has been started before you start.
2. Make sure **Adobe Digital Editions** is installed in your computer. If not, please download it from <http://www.adobe.com> and install.
3. Connect the mini plug of the USB cable to the mini USB port on the player, and insert the other end into a free USB port on your computer.
4. The computer system detects “New hardware” and starts to install the driver automatically. Wait for the system to finish the installation. When it has finished, a new “**Removable Disk**” will be created in “**My Computer**”.
5. Drag and drop the files on your computer to the “**Removable Disk**”.
6. To disconnect the USB cable from the computer, double click the **Safely Remove Hardware** icon on the task bar. Click the **USB Mass Storage Device**, and then click **OK**. Then you can unplug the player safely.

Note: Please do not disconnect the USB cable during loading. It may cause malfunction of the player and the files.

Connect to the power

Plug one end of the power adaptor into the mini USB connector in the player, and the other into a wall outlet.

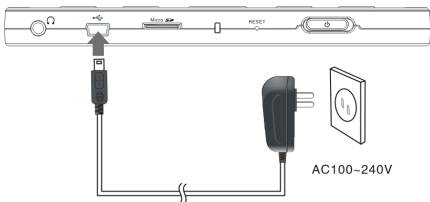

Note:

To turn On/Off the player, hold the **POWER** button.

Charging the battery

- The battery of the player is charging automatically when the player is connected to a computer. Make sure the computer has been started.
- The battery of the player is fully charged in about seven hours. If you charge the player while loading files to the player, it might take longer.
- Read the battery level indication of your player:



Full



Two-thirds full



Half full



Low



Empty


- When charging, the indication will be the animation from empty to full.

Important:

- *Recommended temperature for battery charging is 0 °C to 35 °C.*
- *Fully charge the player before you use it for the first time or when you have not used it for a long time.*
- *Charge the player immediately when the “Low battery” message is displayed.*
- *Do not over charge or discharge the player. Over charging or discharging will shorten the battery life.*
- *The battery could be over discharged if the player is not used for a long time (over three months). To avoid over discharge, fully charge the player every three months and always keep the voltage of the battery above 50%.*
- *If the player is not used for a long time, keep it under the temperature of 23 ± 5 °C and the moisture of 65 ± 20% RH to maintain the performance of the battery.*

Insert memory card

The player includes a Micro SD card slot that enables you to add up to 16GB of additional memory to your player.

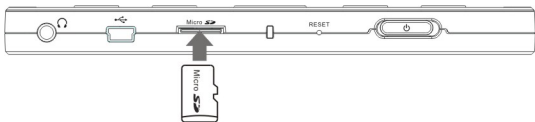

- Insert the Micro SD card into the card slot with the metallic contacts facing towards the backside of the player.

Notes:

- *Do not use any force while inserting a memory card.*
- *To remove the cards, pull it out gently.*
- *Do not remove the card while data transferring.*

Basic operation

Turn on/off the Player


Make sure the battery is sufficient.

 
- To turn on the player, hold the **POWER** button.
- To turn off the player, hold the **POWER** button.





Reset the Player

If a malfunction of the player occurs, take a metal pin, e.g. the end of a paper clip, and press it into the RESET hole to re-initialize the system of your player.

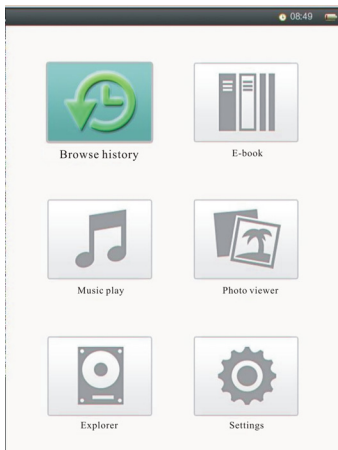Enter the main menu

Once you turn on the player, the main menu appears. In other modes, tap [] to return to the main menu. Use the direction key to select desired mode and press OK to enter.



Icon	Main menu items	Description
	Browse history	Book mark list
	E-book	e-book play list
	Music play	Music list
	Photo viewer	Photo list
	Explorer	All documents list
	Settings	Customize the settings of your player.

Browse history

Once entered the browse history function you can see all the book marks you saved before listed by Thumbnail and you can choose them by pressing OK to resume reading.

In browse history list, press MENU key to pop-up a menu indicate you to delete the selected file, delete all the files or exit.

E-book reading

For the first time you enter the e-book list, all the e-book files will be listed by Thumbnail. You can press MENU key to pop-up a menu to set the list way. Use direction key to choose By Thumbnail, By FileName, By Title or By Author and press OK to confirm.

Once entered the e-book list, use direction key to select the book you like and press OK to start reading.

During reading, you can:

Use direction key and page up, page down key to turn pages.

Use ZOOM key to pop-up a menu to set the font size, use direction up and down key to select S, M, L or XL and press OK to confirm.

The screen will be rotated along with the direction in which you rotate the unit by G-sensor function.

If you want to use more settings, you can press MENU key. Then the pop up window will allow you to select the following:

Option	Function
Page jump	turn to the page you want
Store bookmark	save the book mark here
Bookmark	turn to the book mark you saved before
Delete bookmark	delete the book mark you want
Browse Mode	auto mode or manual mode
Auto flip	set the page turn interval (10s, 15s, 20s, 25s, 30s)
Bright adjustment	set the brightness level (Level 1, Level 2, Level 3, Level 4, Level 5)
Volume adjustment	set the volume level (0~32)
Catalog	show the catalog of the current e-book Note: this function is not available for some e-book files.

Enjoying Music

Once entered the music function, the options will be the following:

Option	Function
Music play/Resume play	show the current played song and resume last played song
All music	list all music
Artist	sort all music by their artists
Album	sort all music by their album
Genre	sort all music by their genre
My favorite	list the favorite music you set (In music list, press MENU key to pop-up a menu to indicate you to add the music selected into the favorite list. In Favorite list, press MENU key to pop-up a menu to indicate you to delete the selected file, clear the favorite or exit.)
Dir list	list all documents
Breakpoint memory	display the 3 files last played and the stopped point, press the OK key to resume playback of the first one from the stopped point.
Updating media library	update the media library

In music list, use direction key to select the music you like and press OK key to start playing.

During playing, you can:

Use PLAY key to pause or resume the music.

Use direction key up and down to tune the volume.

Use direction key left and right to go to previous and next music.

If you want to use more settings, you can press MENU key. Then the pop up window will allow you to select the following:

Option	Function
Repeat setting	choose the music repeat mode (Single once, Single repeat, Play in turn, All repeat, Try)
Play setting	choose the music play mode (In order, Shuffle)
Sound select	choose sound (Normal, Microsoft Sound, Rock, Pop, Classic, Bass, Jazz, My sound)
My music mode setting	set my music mode by user, use direction key to tune and OK to confirm
Screen display setting	choose display the lyric or close the lyric

Note: Lyric Displaying

This player supports lyrics display while music playing. Only the lyrics in LRC format can be displayed.

To add lyrics to the music, take "love music. Mp3" for example:

1. Download the corresponding lyrics with extension ".lrc" from the Internet.
2. Rename the lyrics file as "love music.lrc". Make sure the lyrics filename is the same as the music file name.
3. Copy both files into the same folder on the player.
4. The lyrics will be display on the screen while the music is playing.

As the background music


The music can be used as the background music while you are reading the e-book or viewing the photo.

When the music is playing, you can go to read the e-book or view the photo, press PLAY key to display the music playback progress bar on the bottom of the screen and the bar will fade out in 5 seconds.

Use PLAY key to pause or resume the music.

Use direction key up and down to tune the volume.

Use direction key left and right to go to previous and next music.

The progress bar will fade out by pressing  key.

Viewing Photos

Once entered the photo function, use direction key to select the photo you like and press OK to start playing.

During playing you can:

Use direction key to switch photos.

Use ZOOM key to zoom in or zoom out. (this function is unavailable for the photos in GIF format)

The screen will be rotated along with the direction which you rotate the unit by G-sensor function.

If you want to use more settings, you can press MENU key. Then the pop up window will allow you to select the following:

Option	Function
Browse	set the sliding show interval (Close, 5s, 10s, 20s)

Explorer

Once entered the explorer function, you can find all documents in the memory or in your card.

You can play the document directly by select it and then press OK to play.

In the documents list, press direction key to select desired document and press MENU key to pop-up a menu indicate you to delete the selected document.

Settings

Once entered the settings function, use direction key to select the item and press OK to start setting.

The options available will be:

Option	Function
Display settings	Backlight time setting (5s, 10s, 15s, 20s, 30s and always light)
	Bright adjustment (level 1, level 2, level 3, level 4, level 5) level 5 is the most bright option
System settings	Choose to restore system
	Key lock time(10s, 30s, 5min,10min, no locking)
	Choose to erase activation record
Language	Select language (English/ French/ Spanish)
System Information	Show the software version, memory size information
Auto shut down time	Select auto shut down time (3 min, 5 min,10 min,15 min,20 min and No automatic shut down)
Time settings	Set time and date, direction key left and right to switch option, direction key up and down to adjust number.
Calendar	Show calendar, during this interface you can use direction key left and right to switch date, direction key up and down to switch week.
Operation Manual	Show the operation manual.
Screen Orientation	Screen orientation setting (Auto, off)

Troubleshooting

If you have problems in operating your player, please check the points below before sending it to service center.

Symptom	Check Item
Cannot power on	<ul style="list-style-type: none">The battery may be exhausted. Please recharge the battery.
Files cannot be downloaded	<ul style="list-style-type: none">Check the connection between the player and PC.
No sound from the headphone	<ul style="list-style-type: none">Please ensure the volume is not 0, and the connection of headphone is not a problem.Check if the format of the music file is supported by the player.
The text of LCD display abnormality	<ul style="list-style-type: none">Please ensure you select the correct language.
The buttons do not work	<ul style="list-style-type: none">The keys may be lock. Hold PLAY button to unlock all buttons.Press the reset hole with metal pin to re-initialize the system of the player.

Specification

Display	7" TFT
Resolution	800 x 600, 4:3
E-Book Format	EPUB, PDF, TXT, FB2
Music Format	MP3, WMA, APE, FLAC, OGG, WAV, AAC
Photo Format	JPG, BMP, GIF
Storage condition	Humidity < 90%, -20~60°C
Working condition	Humidity < 80%, 0~45°C
Supported Card	Micro SD card, support to 16GB
Power Supply	DC 5V, < 8 W
Battery	Built-in Lithium Ion Battery Full charge time: 4 h Playback Time: e-Book: up to 10 h Music: up to 8 h
Size LxWxH:	195.1 mm x 145.7 mm x 13.0 mm
Weight:	375 g

©2010 ZERO CORPORATION LIMITED

Flat 1802, World Wide House,
10 Des Vœux Road, Central, Hong Kong

Tous les produits sont distribués par Zero Corporation Limited

À moins d'indication contraire

Fabriqué en Chine

©2010 Zero Corporation Limited.

Nextbook est une marque de commerce et de service de
IP Power Holdings Limited.

Tous les autres noms de marque et toutes les autres marques
de commerce et de service sont la propriété de leur propriétaire.