

How to Configure Email Manually

Article Details

URL: https://www.entourageedge.com/support/index.php?_m=knowledgebase&_a=viewarticle&kbarticleid=211

Article ID: 211

Created On: 12 Nov 2010 11:22 AM

Answer

Before you Begin

Did you try automatic email set up? Some email configurations can be set up following the email wizard. [See this knowledge base article.](#)

You will need your email username and password before setting up email. The enTourage or Pocket eDGe only provide **access to an existing email account.**

Manual Configuration



1. Select the Email icon on the bottom of the color screen.
2. Read the welcome screen, then press Next.
3. Enter your email address and your email password. Make sure your email password is correct. You may need to log in to your email account through a PC to verify your password.
4. **At the bottom left of the screen select Manual setup.**

In order to continue with configuration, you will need to obtain all your email server settings from your service provider.

You will need to know:

- Is your email POP3 or IMAP?
- Your incoming server settings
- Your outgoing server settings

For your convenience, and to use as an example, we have include the settings for several common email providers below.

To view an email provider's settings, select a link below.

- [Yahoo](#)
- [Gmail](#)
- [Hotmail](#)
- [Verizon](#)
- [AT&T](#)
- [Comcast](#)
- [Bellsouth](#)
- [AOL and AIM](#)
- [Roadrunner](#)
- [Cox](#)

If your provider is not listed, you will have to contact their technical support to obtain the correct settings.